


# D-GUARD<sup>2</sup>S



## INSTRUCTION MANUAL

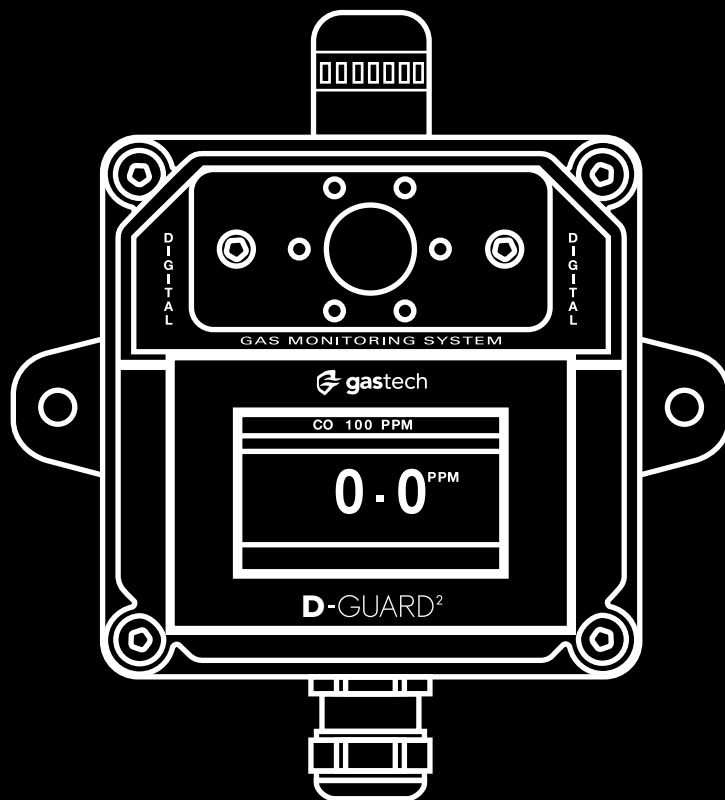

## 1 Introduction

The D-Guard<sup>2</sup>S is a single gas fixed detector with a large range of available sensors and an easy to use interface. The D-Guard<sup>2</sup>S features alarm relays and a sounder / strobe.



Figure 1. D-Guard<sup>2</sup>S.

## 2 Method of Operation

The D-Guard<sup>2</sup>S detects toxic or flammable gas and can interface with external equipment to trigger alarms or operate additional equipment. The D-Guard<sup>2</sup>S can be fitted with an oxygen sensor to measure the oxygen concentration in the environment.

The D-Guard<sup>2</sup>S detects gas via diffusion to the sensor at normal atmospheric pressure.

## 3 For Your Safety

**Warning:** Do not make changes to this D-Guard<sup>2</sup>S without the express written permission of Gastech Australia Pty Ltd. Changes that are not approved can cause death or injury to personnel.

## 4 Further Information

Please tell us if you want help with this equipment.

Head Office: Gastech, 24 Baretta Road, Wangara, WA 6065, Australia.

Phone: +61 8 6108 0000 Email: [info@gastech.com](mailto:info@gastech.com) Website: [gastech.com](http://gastech.com)

Table of Contents

1	Introduction . . . . .	2
2	Method of Operation . . . . .	2
3	For Your Safety . . . . .	2
4	Further Information . . . . .	2
5	List of Figures . . . . .	5
6	Keywords and Symbols Used in This Manual . . . . .	6
7	Intended use . . . . .	7
8	Safety Precautions . . . . .	7
9	Models covered by this instruction manual . . . . .	7
10	What is in the Box?. . . . .	8
11	Installation Information . . . . .	9
11.1	D-Guard <sup>2</sup> S Mechanical Installation . . . . .	9
12	Electrical Installation . . . . .	10
13	Response Test . . . . .	11
14	Operation . . . . .	12
14.1	Power up . . . . .	13
14.2	Home screen features . . . . .	14
14.3	Unlock the menu screen . . . . .	14
14.4	Passcode Requested . . . . .	15
15	Calibration . . . . .	16
15.1	Go to the calibration menu . . . . .	16
15.2	Attach the calibration gas to the D-Guard <sup>2</sup> S. . . . .	17
15.3	Calibration Modes . . . . .	18
15.4	Calibration Trend Bar . . . . .	18
15.5	Auto Zero Calibration. . . . .	19
15.6	Auto Span Calibration . . . . .	20
15.7	Manual Zero Calibration . . . . .	21
15.8	Manual Span Calibration . . . . .	22
16	System Information . . . . .	23
17	Status . . . . .	24
17.1	Clear Latched Alarms . . . . .	24
18	Sensor Settings . . . . .	25
18.1	Go to the Sensor Settings Menu. . . . .	25
18.2	Set Detector Full Scale . . . . .	26
18.3	Set Span Gas Concentration . . . . .	27
18.4	Set Zero Gas Concentration . . . . .	28
18.5	Set Suppression Band . . . . .	29
18.6	Sensor Gain . . . . .	30
19	Alarm Settings . . . . .	31
19.1	Go to the Alarm Settings menu . . . . .	31
19.2	Alarm Direction . . . . .	32
19.3	Alarm Level . . . . .	33
19.4	Alarm Relay state. . . . .	34
19.5	Alarm Latch . . . . .	35
19.6	Latched Alarm Examples . . . . .	36

20	System Settings.	37
20.1	Access the System Settings	37
20.2	Isolate	38
20.3	Set Passcode	39
20.4	Disable Passcode	40
21	Advanced Settings.	41
21.1	Go to the Advanced Settings Menu	41
21.2	System Calibration	42
21.3	4-20mA Output Test.	43
21.4	Relay Function Test	44
21.5	Reset Sensor Life.	45
21.6	Sensor Presets	46
22	Error Codes	47
23	4-20mA Output Fault Conditions	47
24	Specifications	48
24.1	Enclosure Specifications	48
24.2	Mechanical Specifications.	50
24.3	Environmental Specifications.	50
24.4	General Specifications	51
24.5	Wiring Specifications	51
24.6	D-Guard <sup>2</sup> S Versions, Gas, Range, and Resolution	52
25	Warranty	53
25.1	Sensor Warranty periods	53
26	Replacement Parts.	54
26.1	Replacement Parts - exploded view	54
26.2	Replacement parts - list	55
27	PCB (Part number 57-0028) Configuration Jumpers	56
28	Maintenance.	57
28.1	Calibration Interval	57
28.2	Cleaning	57
28.3	Visual Inspection.	57
29	Gastech Policy Statements	58

## 5 List of Figures

Figure 1.	D-Guard <sup>2</sup> S.	2
Figure 2.	Keywords and symbols used in this manual.	6
Figure 3.	List of supplied items..	8
Figure 4.	D-Guard <sup>2</sup> S mounting dimensions in millimetres..	9
Figure 5.	Arrows show magnetic sensor positions.	12
Figure 6.	D-Guard <sup>2</sup> S menu icons.	12
Figure 7.	D-Guard <sup>2</sup> S splash screen.	13
Figure 8.	D-Guard <sup>2</sup> S at sensor warm up..	13
Figure 9.	D-Guard <sup>2</sup> S normal operating screen..	13
Figure 10.	Main display layout.	14
Figure 11.	Menu locked.	14
Figure 12.	Menu unlocked.	14
Figure 13.	Trend Bar states.	18
Figure 14.	Sensor Gain Warning.	26
Figure 15.	Span Gas Concentration Warning.	27
Figure 16.	Zero Gas Concentration Warning.	28
Figure 17.	Sensor gain warning.	30
Figure 18.	Minimum alarm level warning.	33
Figure 19.	Maximum alarm level warning.	33
Figure 20.	AL1 and AL2 Latched.	36
Figure 21.	AL1 Latched.	36
Figure 22.	AL2 Latched.	36
Figure 23.	D-Guard <sup>2</sup> S home screen when isolated.	38
Figure 24.	Error codes.	47
Figure 25.	4-20 mA output loop fault currents.	47
Figure 26.	D-Guard <sup>2</sup> S dimensions in millimetres (front view)..	48
Figure 27.	D-Guard <sup>2</sup> S dimensions in millimetres (side view)..	49
Figure 28.	D-Guard <sup>2</sup> S Mechanical specifications..	50
Figure 29.	D-Guard <sup>2</sup> S Environmental specifications..	50
Figure 30.	D-Guard <sup>2</sup> S General Specifications..	51
Figure 31.	D-Guard <sup>2</sup> S Electrical connections.	51
Figure 32.	D-Guard <sup>2</sup> S versions..	52
Figure 33.	Sensor warranty periods in months.	53
Figure 34.	D-Guard <sup>2</sup> S replacement parts - exploded view..	54
Figure 35.	D-Guard <sup>2</sup> S replacement parts list.	55
Figure 36.	PCB 57-0028 jumper locations..	56
Figure 37.	PCB 57-0028 jumper settings.	56
Figure 38.	Splash Guard.	57

## 6 Keywords and Symbols Used in This Manual



Symbol	Keyword	Description
No Symbol	Warning	Warning: Do not (warning text). Can cause injury or death to personnel.
No Symbol	Caution	Caution: Do not (caution text). Can cause damage to parts or equipment.
	Service tool	Combined magnetic wand and hex key service tool
	Calibration plug	Calibration adapter
No Symbol	Full Scale	The user selectable range of the detector. This cannot exceed the maximum range of the sensor.
No Symbol	Suppression Band	The suppression band prevents the D-Guard <sup>2</sup> S from displaying small changes in the detected gas level close to zero.
No Symbol	Sensor Gain	The sensor gain adjusts the amplification of the sensor output.
No Symbol	AL1	User configurable Alarm 1
No Symbol	AL2	User configurable Alarm 2
No Symbol	IP	Ingress Protection Rating

Figure 2. Keywords and symbols used in this manual.

## 7 Intended use

The D-Guard<sup>2</sup>S is designed as a fixed gas detector with a 4-20 mA current loop output. The detector can interface with external equipment to transmit gas levels and trigger external alarm devices.

**Warning:** The D-Guard<sup>2</sup>S detects toxic and flammable gases and oxygen concentrations. These gases can cause injury or death to personnel.

**Warning:** The D-Guard<sup>2</sup>S is not a personal gas detector. If you do not use a personal gas detector this can cause injury or death to personnel.

**Warning:** Do not use the D-Guard<sup>2</sup>S in an explosive or oxygen rich atmosphere. An explosion can cause injury or death to personnel.

## 8 Safety Precautions

**Warning:** You must obey all caution and warning statements in this instruction manual. Failure to obey can result in injury or death to personnel.

**Warning:** You must do a response test before first use. Incorrect calibration can result in injury or death to personnel.

## 9 Models covered by this instruction manual

**Caution:** This manual is intended for the non-certified D-Guard<sup>2</sup>S. The D-Guard<sup>2</sup>S features alarm relays and a sounder / strobe. Do not use this manual for other models in our range.

Please refer to the [D-Guard<sup>2</sup>S Versions](#) for a list of all models covered by this manual.

## 10 What is in the Box?




Item	Description
	D-Guard <sup>2</sup> S gas detector
	D-Guard <sup>2</sup> S Service Tool. The service tool activates the internal menu magnetic sensors and includes an integrated 4mm hex key to open the enclosure.
	The Quick Start Guide (QSG) provides a brief overview of the installation and operation of the D-Guard <sup>2</sup> S gas detector.
	Calibration Certificate. The D-Guard <sup>2</sup> S is factory calibrated before dispatch.
	Calibration plug

Figure 3. List of supplied items.



## 11 Installation Information

**Warning:** The D-Guard<sup>2</sup>S must be installed by an approved person. Incorrect installation can cause injury or death to personnel.

### 11.1 D-Guard<sup>2</sup>S Mechanical Installation

The D-Guard<sup>2</sup>S should be mounted vertically to a suitable flat surface. Make sure the cable gland faces the ground. Use the two mounting eyes with M6 fasteners suitable for the surface type. Make sure the data plate, on the right hand side, remains visible after installation.

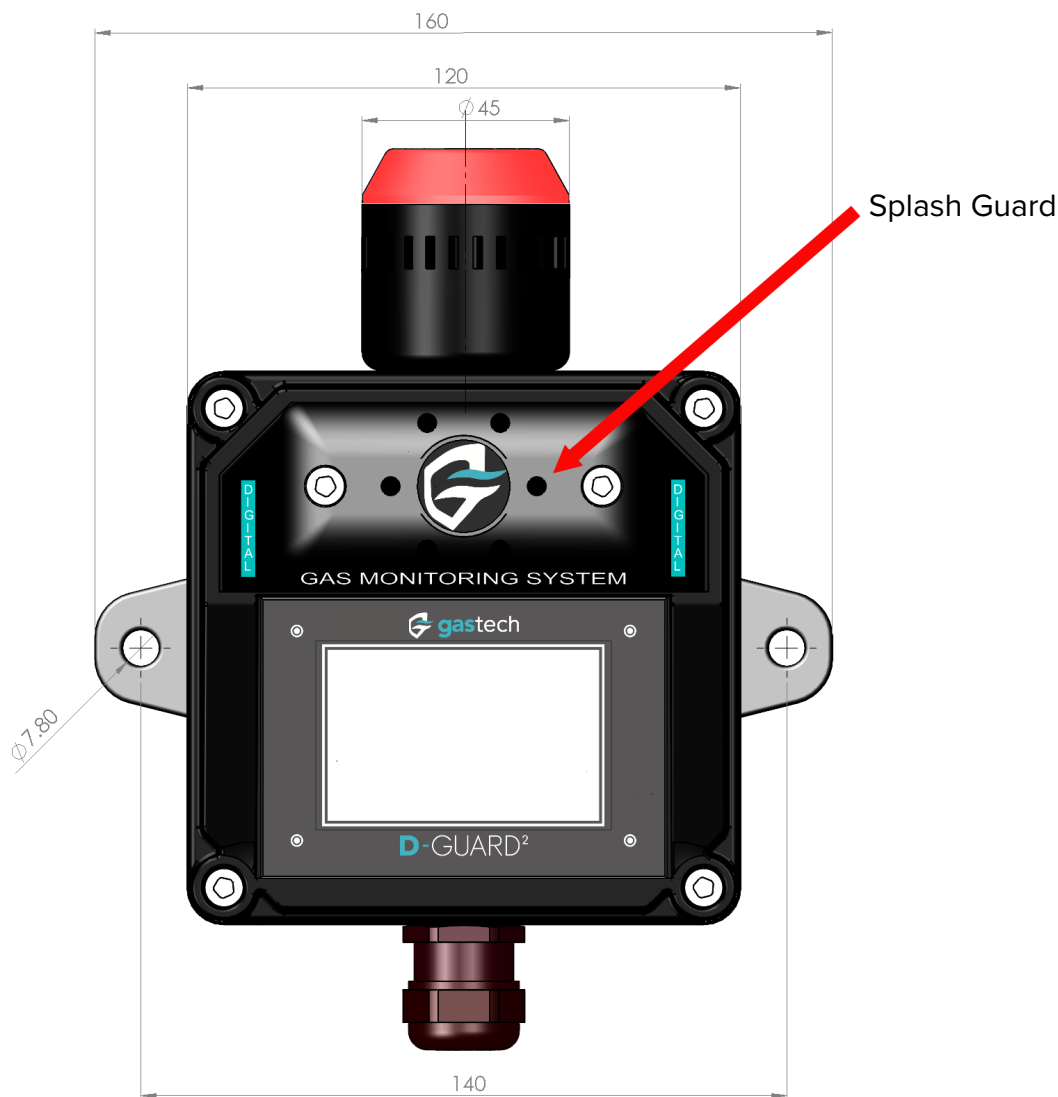


Figure 4. D-Guard<sup>2</sup>S mounting dimensions in millimetres.

**Caution:** Do not over tighten the M6 fasteners as this can cause distortion of the enclosure.


**Caution:** Water or dust on the Splash Guard can interfere with gas detection.

## 12 Electrical Installation


**Warning:** The D-Guard<sup>2</sup>S must be installed by an approved person. Incorrect installation can cause injury or death to personnel.



Step 1. Loosen the 4 screws holding the top case on.

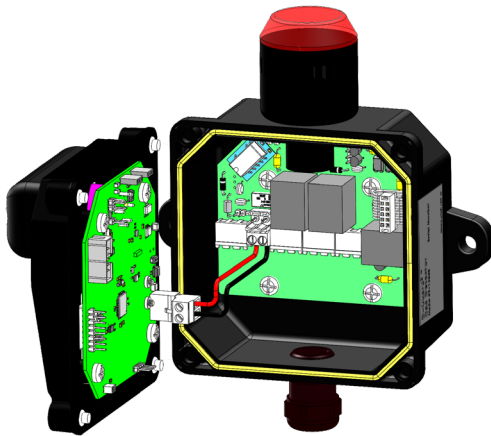

Step 2. Open the D-Guard<sup>2</sup>S enclosure.

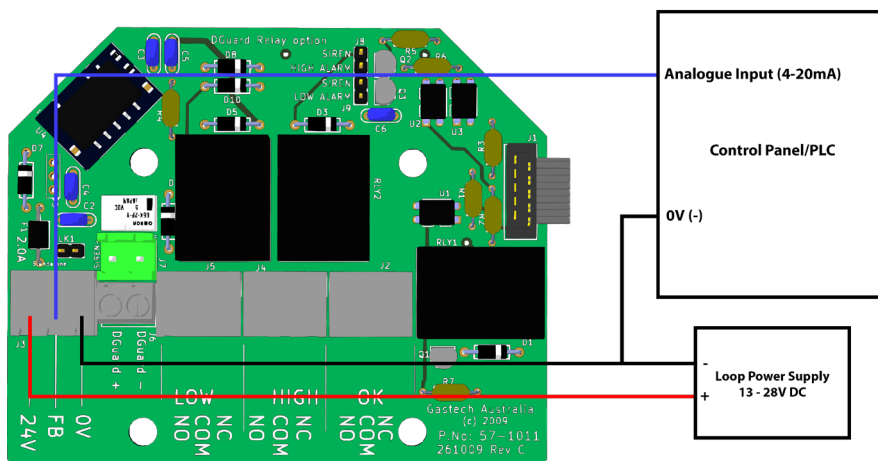

Step 3. Connect the D-Guard<sup>2</sup>S as shown. The DC supply voltage is 13 - 28 V.

Step 4. You must use suitable cable. Refer to the [Wiring Specifications](#).

## 13 Response Test

**Warning:** You must do a response test before first use. Incorrect calibration can result in injury or death to personnel.

The D-Guard<sup>2</sup>S has been calibrated before dispatch.

The D-Guard<sup>2</sup>S must be response tested when it is first commissioned and as necessary during use.

Step 1. [Apply gas](#) to the D-Guard<sup>2</sup>S.

Step 2. Apply the gas for at least 3 minutes or until the indicated concentration is within  $\pm 10\%$  of the applied gas concentration. Gas flow rate must be greater than or equal to 1L/min.

**Caution:** You must recalibrate the D-Guard<sup>2</sup>S if its results do not agree with this specification. Go to the [Calibration](#) menu.

## 14 Operation

The D-Guard<sup>2</sup>S menu system is controlled by the D-Guard<sup>2</sup>S Service Tool (supplied). Four magnetic sensors, located behind the display window, are activated by the Service Tool. The four marks on the D-Guard<sup>2</sup>S display match the magnetic sensor positions.

The menu system uses custom icons and text to give information to the user. To access a function, use the Service Tool on the magnetic sensor that is next to the icon displayed on the screen.

**Note:** If an icon is not shown, that adjacent magnetic sensor has no function on that screen.



Figure 5. Arrows show magnetic sensor positions.

Icon	Description	Icon	Description	Icon	Description	Icon	Description
	Locked		Alert		Alarm		Increase
	Calibrate		Home		Alarm muted		Decrease
	Information		Settings		Alarm latched		Skip
	Down		Up		Accept		Start
	Left		Right				

Figure 6. D-Guard<sup>2</sup>S menu icons.

## 14.1 Power up

Connect power to D-Guard<sup>2</sup>S and energise the unit.



Figure 7. D-Guard<sup>2</sup>S splash screen.

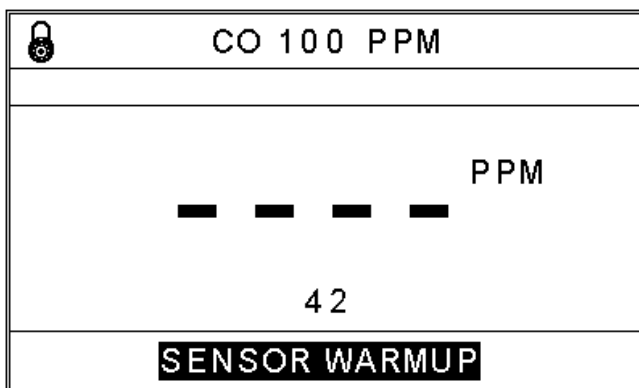


Figure 8. D-Guard<sup>2</sup>S at sensor warm up.

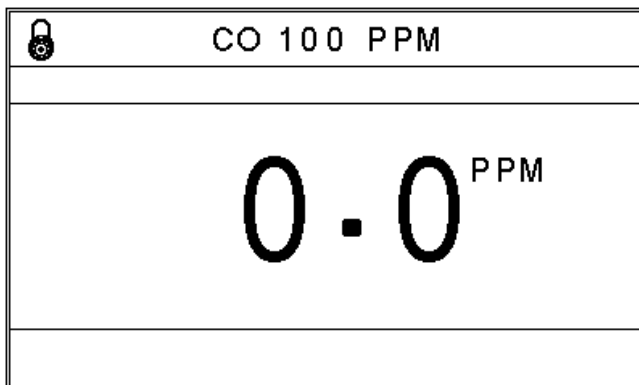


Figure 9. D-Guard<sup>2</sup>S normal operating screen.

**Caution:** You must wait 30 minutes for the D-Guard<sup>2</sup>S to become stable. You can calibrate it after 30 minutes.

**Caution:** Some sensors may need up to 24 hours to become stable before calibration is tried.

### 14.2 Home screen features

The home screen is the main display that will be visible. It shows the installed gas sensor, range and the current reading. System alerts are displayed at the bottom.

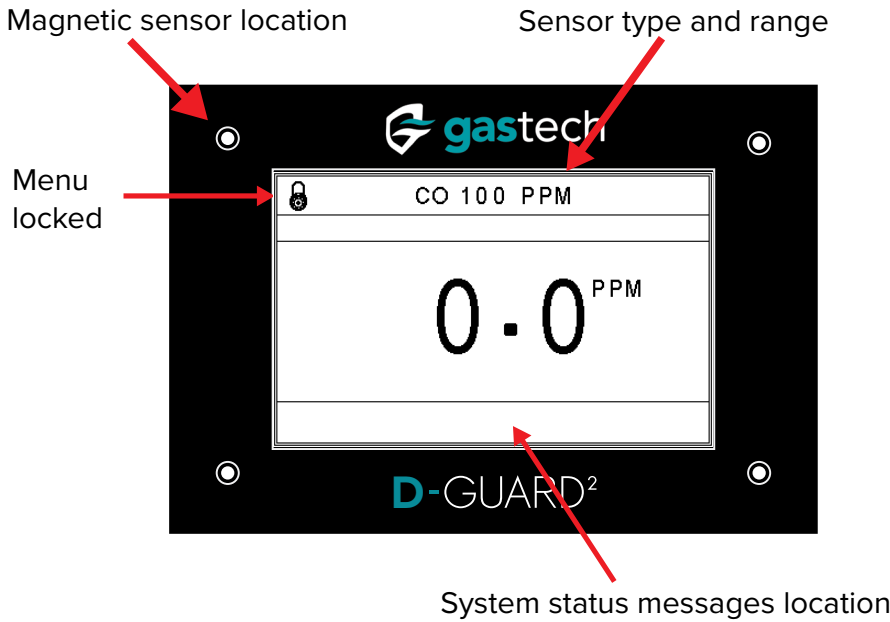


Figure 10. Main display layout.

The D-Guard<sup>2</sup>S is normally locked and must be unlocked with the supplied Service Tool.

### 14.3 Unlock the menu screen

Put the Service Tool over the magnetic sensor location closest to the padlock icon for at least one second to unlock the D-Guard<sup>2</sup>S.

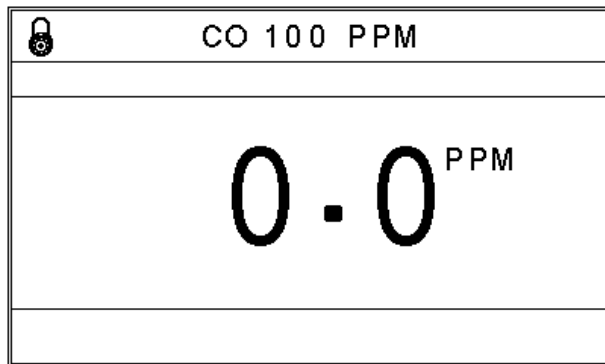


Figure 11. Menu locked.

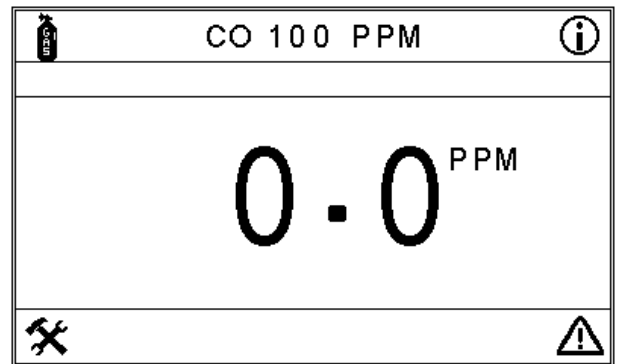


Figure 12. Menu unlocked.


**Note:** If no passcode is set the menu system will unlock.

### 14.4 Passcode Requested


You must enter the passcode when prompted.

**Caution:** The Enter Passcode screen only appears when a passcode has been set.


**Note:** The line below the number indicates which digit will change.

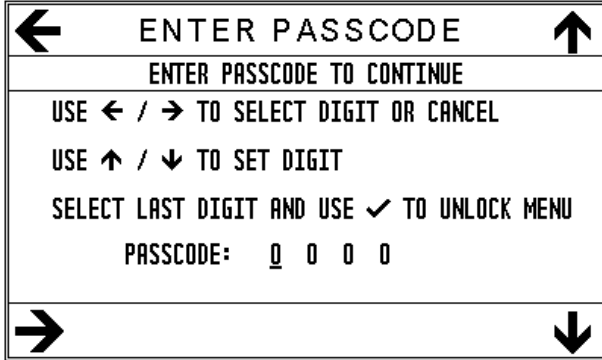


Step 1. Change the value with the <u>/</u> keys.

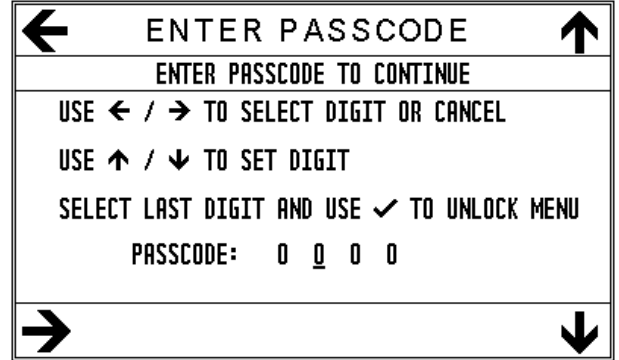


Step 2. Accept the value with the <u>/</u> key.

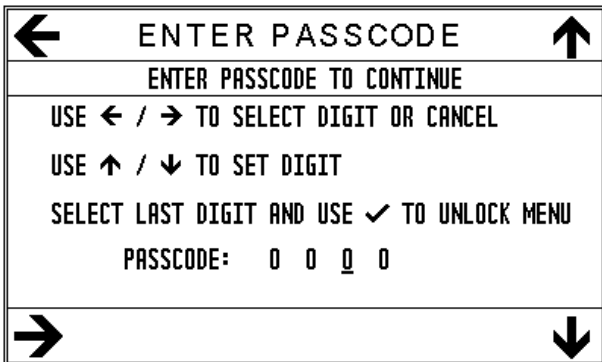

Step 3. Accept the value with the <u>/</u> key.

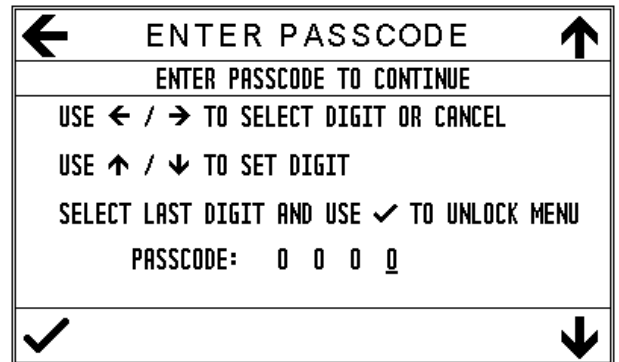

Step 4. Accept the value with the <u>/</u> key.

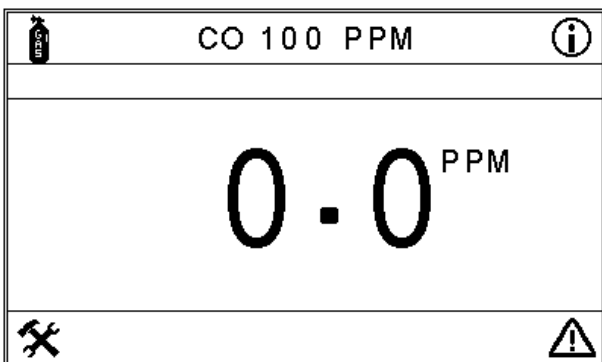

Step 5. The menu is unlocked.

**Caution:** If you forget the passcode, you must return the D-Guard<sup>2</sup>S to a Gastech Service Centre.

## 15 Calibration

The D-Guard<sup>2</sup>S is factory calibrated before dispatch. You must calibrate the D-Guard<sup>2</sup>S regularly. Calibration adjusts the response of the D-Guard<sup>2</sup>S to known concentrations of gas at two points, zero and span.

Zero calibration uses zero-grade air or fresh air, which does not contain any trace of the detectors intended target gas. You can set the [concentration of zero calibration gas](#).


Span calibration uses a known concentration of the intended target gas. You can set the [concentration of span calibration gas](#).

**Warning:** Use the calibration plug for each calibration or bump test. Incorrect calibration can result in injury or death to personnel.


### 15.1 Go to the calibration menu

Make sure the [menu screen is unlocked](#).


Put the Service Tool over the magnetic sensor location closest to the gas cylinder icon for one second to access the calibration menu.

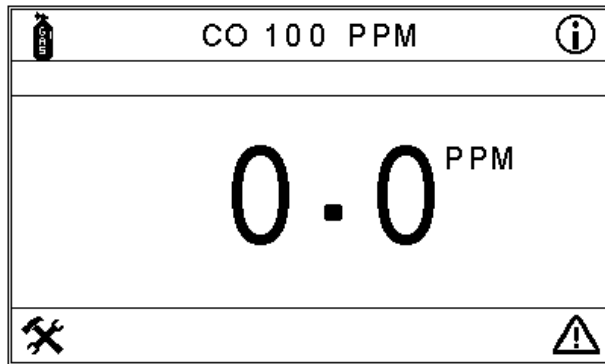

Step 1. Use to enter the calibration menu.

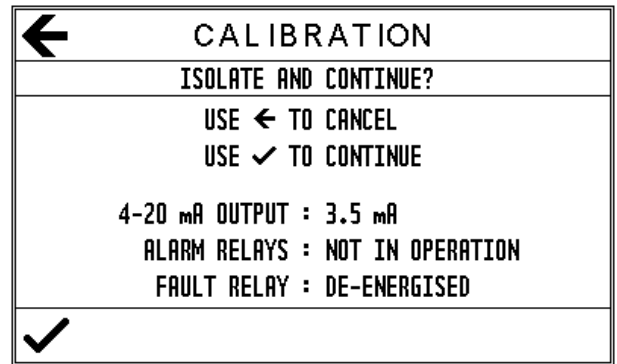

Step 2. Use to continue or to go back.

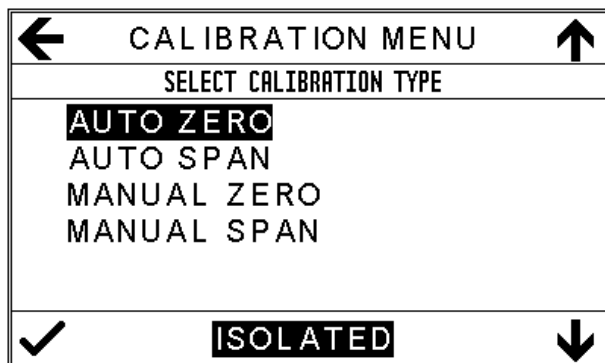

Step 3. Calibration menu.

**Note:** If CANCEL was selected, the D-Guard<sup>2</sup>S will auto lock after a ten second delay.

**Warning:** A competent person must calibrate the D-Guard<sup>2</sup>S. Incorrect calibration can cause injury or death to personnel.



## 15.2 Attach the calibration gas to the D-Guard<sup>2</sup>S

The D-Guard<sup>2</sup>S is a normally aspirated gas detector that operates at normal atmospheric pressure. A calibration plug is provided to make sure that gas is applied correctly to the sensor.



Step 1. Remove the splash guard.



Step 2. Fit the calibration plug.



Step 3. Attach tubing to the calibration plug.



Step 4. Use a 1L / min fixed flow regulator.

### 15.3 Calibration Modes

The D-Guard<sup>2</sup>S has two calibration modes, Auto and Manual.

The Auto calibration mode checks that the rate of change of the detected gas has decreased to less than  $\pm 0.1\%$  of full scale per second, and adjusts the D-Guard<sup>2</sup>S response automatically.

The Manual calibration mode allows the user to adjust the D-Guard<sup>2</sup>S calibration when the response has stabilised.

Use the Trend Bar to determine when the rate of change of the detected gas has decreased to less than  $\pm 0.1\%$  of full scale per second.

### 15.4 Calibration Trend Bar

The D-Guard<sup>2</sup>S has a trend bar to show the detected rate of change of the applied gas. The trend bar has seven different positions and provides a clear visual indication of the rate of change of the detected gas concentration levels.

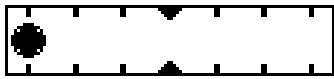
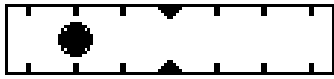
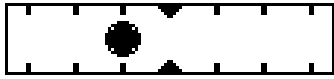
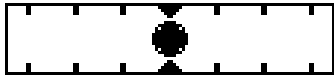

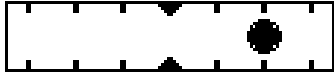
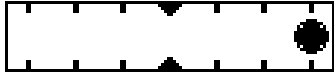
Trend Bar State	Concentration	Percentage full scale Rate of change / second
	Falling	$> 3\%$
	Falling	$1\% < x \leq 3\%$
	Falling	$0.1\% \leq x \leq 1\%$
	Stable	$< \pm 0.1\%$
	Rising	$0.1\% \leq x \leq 1\%$
	Rising	$1\% < x \leq 3\%$
	Rising	$> 3\%$


Figure 13. Trend Bar states.

**Warning:** A competent person must calibrate the D-Guard<sup>2</sup>S. Incorrect calibration can result in injury or death to personnel.


### 15.5 Auto Zero Calibration.

Auto zero calibration is part of the [Calibration menu](#).


**Note:** Fresh air can be used in place of zero-grade air.

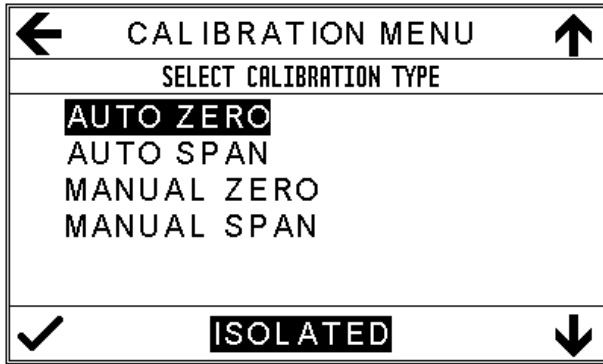


Step 1. Use  to go into the auto zero calibration.

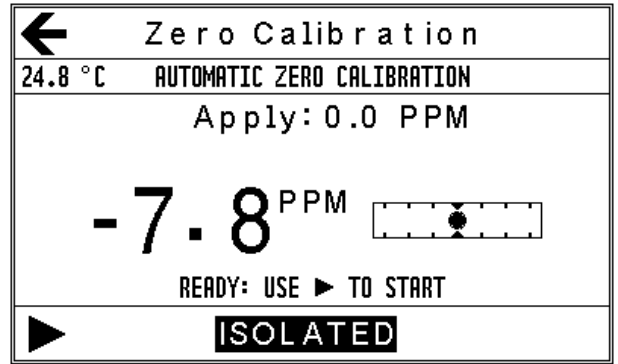

Step 2. Apply the correct gas. Use  to start.

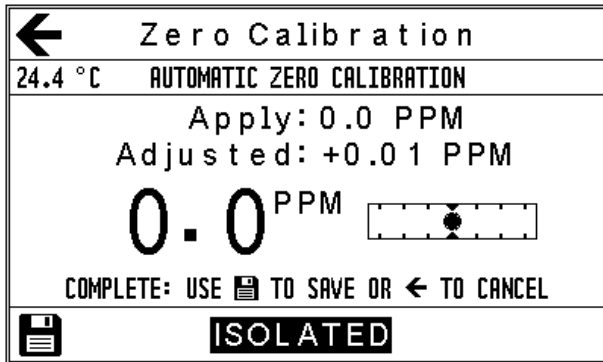


Step 3. Use  to save or  to cancel.

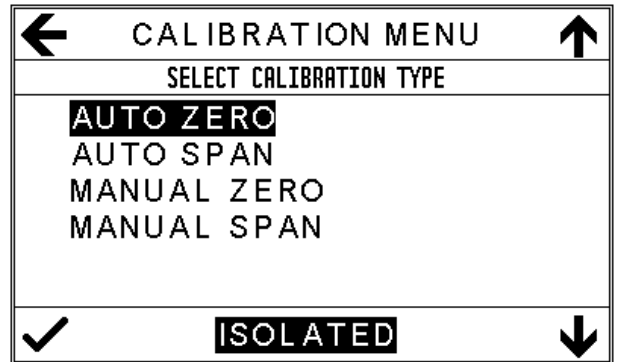


Step 4. Use  to go back or  to continue.

**Caution:** You must monitor the alarm states before you exit the calibration menu. Alarms can remain active until the calibration gas has been removed from the sensor.

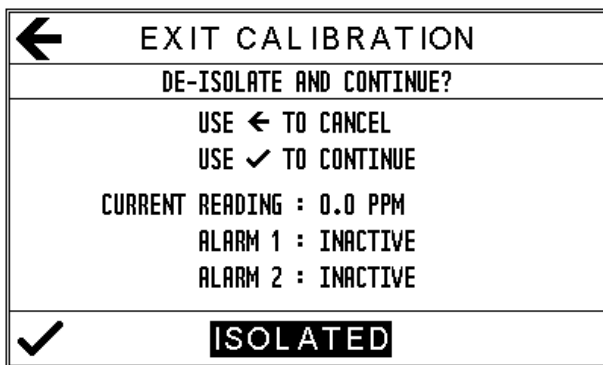

Step 5. Use  to go back or  to cancel.

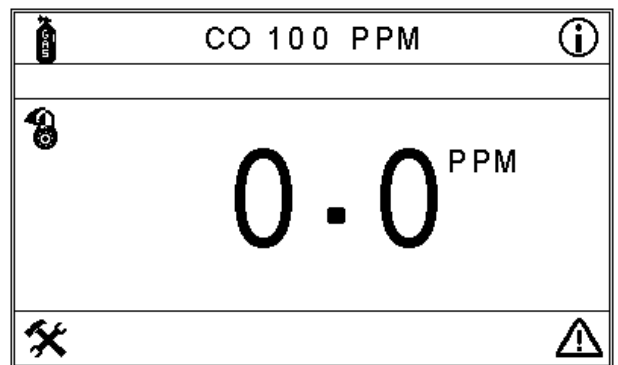


Step 6. Calibration completed.

**Note:** The D-Guard<sup>2</sup>S Auto Calibration mode determines when the rate of change of the applied gas has decreased to less than  $\pm 0.1\%$  of full scale per second.


**Warning:** A competent person must calibrate the D-Guard<sup>2</sup>S. Incorrect calibration can result in injury or death to personnel.

## 15.6 Auto Span Calibration


Auto span calibration is part of the [Calibration menu](#).

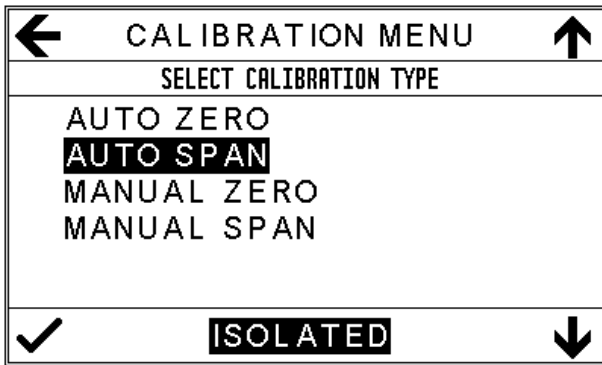


Step 1. Use ✓ to go into the auto span calibration.

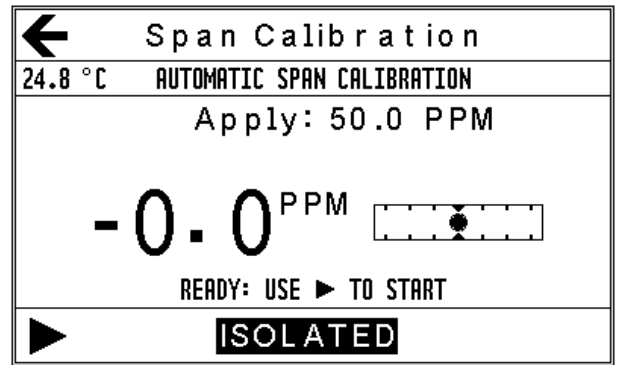

Step 2. Apply the correct gas. Use ► to start.

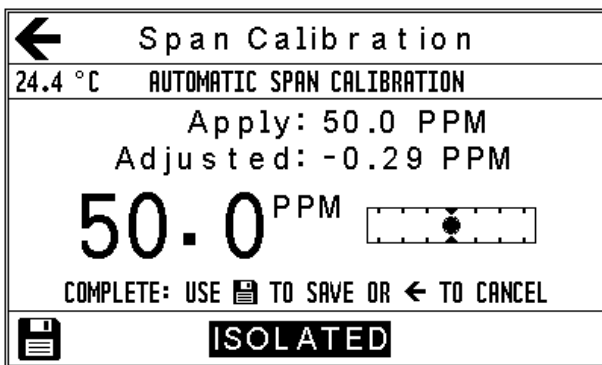


Step 3. Use [save icon] to save or ◀ to cancel.

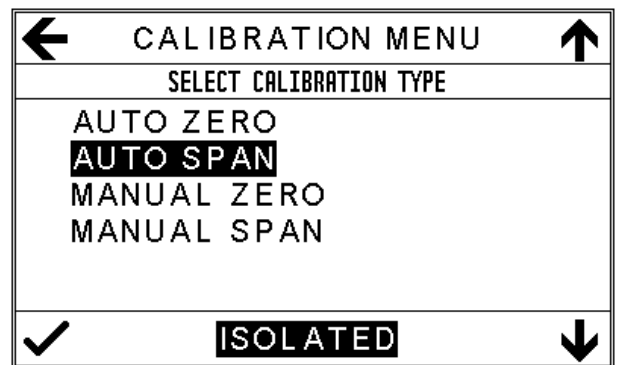


Step 4. Use ◀ to go back or ✓ to continue.

**Caution:** You must monitor the alarm states before you exit the calibration menu. Alarms can remain active until the calibration gas has been removed from the sensor.

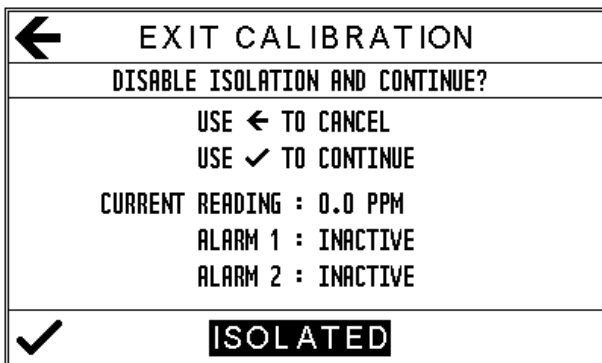

Step 5. Use ✓ to go back or ◀ to cancel.

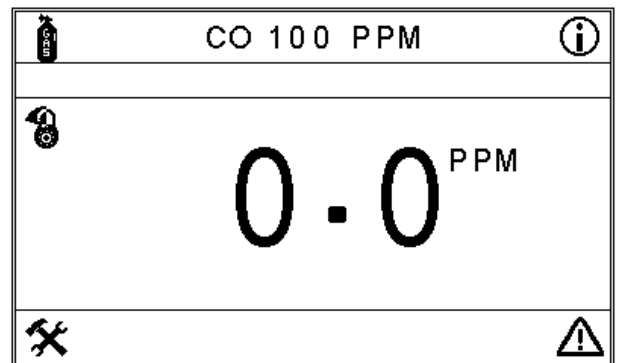

Step 6. Calibration completed.

**Note:** The D-Guard<sup>2</sup>S Auto Calibration mode determines when the rate of change of the applied gas has decreased to less than  $\pm 0.1\%$  of full scale per second.


**Warning:** A competent person must calibrate the D-Guard<sup>2</sup>S. Incorrect calibration can result in injury or death to personnel.

### 15.7 Manual Zero Calibration


Manual zero calibration is part of the [Calibration menu](#).

**Note:** Fresh air can be used in place of zero-grade air.


**Note:** The D-Guard<sup>2</sup>S Trend Bar is used to determine when the rate of change of the applied gas has decreased to less than  $\pm 0.1\%$  of full scale per second.

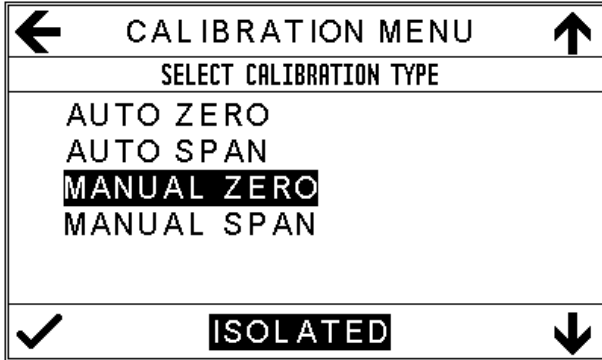


Step 1. Use **✓** to go into the manual zero calibration.

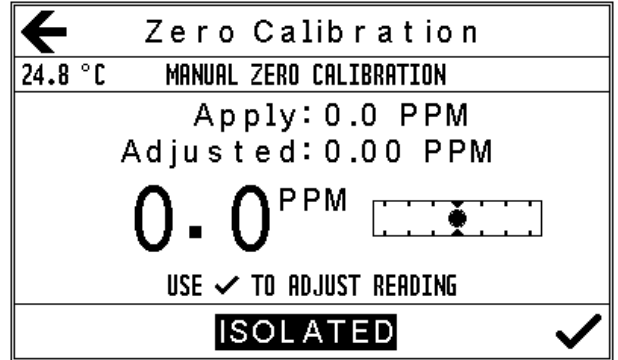


Step 2. Apply the correct gas. Use **▶** to adjust.

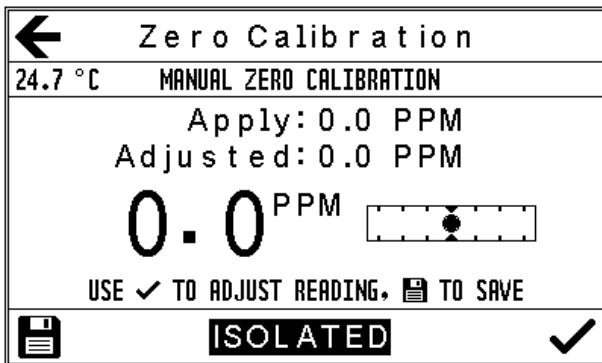


Step 3. Use **✓** to adjust or **📄** to save.

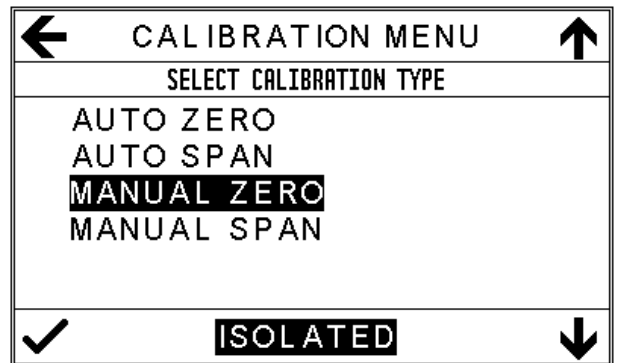

Step 4. Use **←** to go back or **✓** to continue.

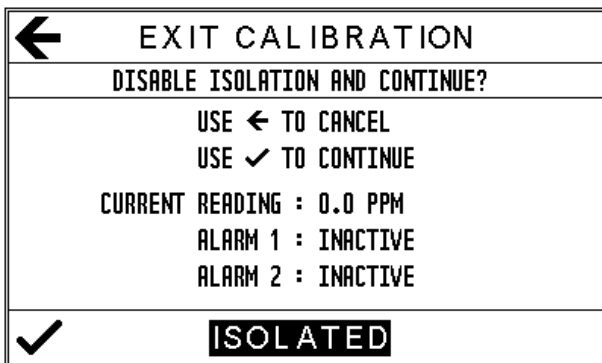

Step 5. Use **✓** to go back or **←** to cancel.

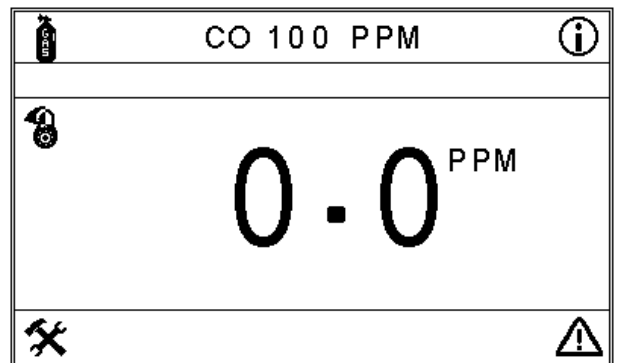


Step 6. Calibration completed.

**Warning:** A competent person must calibrate the D-Guard<sup>2</sup>S. Incorrect calibration can result in injury or death to personnel.


## 15.8 Manual Span Calibration

Manual span calibration is part of the [Calibration menu](#).


**Note:** The D-Guard<sup>2</sup>S Trend Bar is used to determine when the rate of change of the applied gas has decreased to less than  $\pm 0.1\%$  of full scale per second.

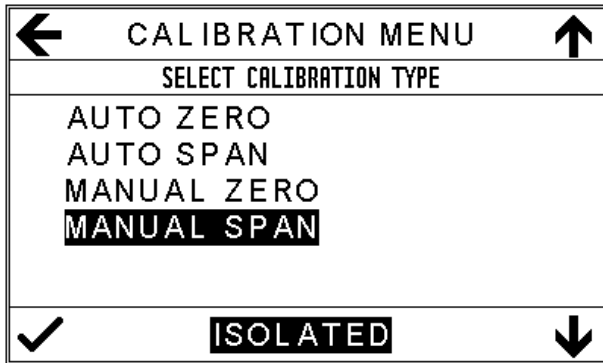


Step 1. Use  to go into the manual span calibration.

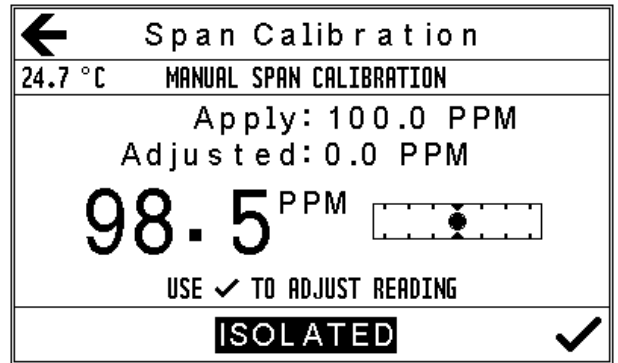


Step 2. Apply the correct gas. Use  to adjust.

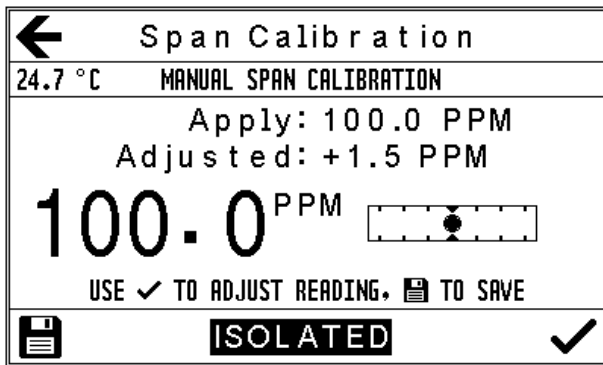


Step 3. Use  to adjust or  to save.

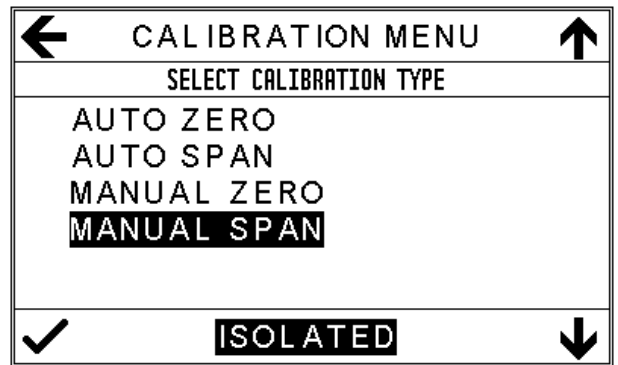

Step 4. Use  to go back or  to continue.

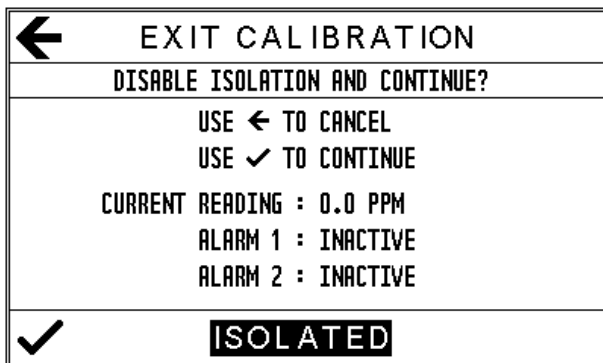

Step 5. Use  to go back or  to cancel.

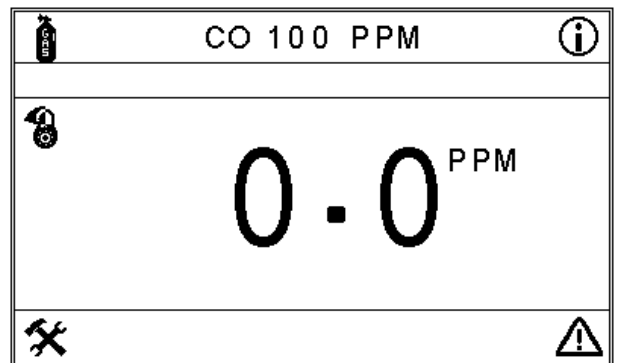


Step 6. Calibration completed.


**Warning:** A competent person must calibrate the D-Guard<sup>2</sup>S. Incorrect calibration can result in injury or death to personnel.

## 16 System Information

The system information screens provide information about the hardware and firmware installed in the D-Guard<sup>2</sup>S. The sensor information screen contains useful diagnostic information about the installed sensor and its present and previous calibration information. Make sure the [menu system is unlocked](#).

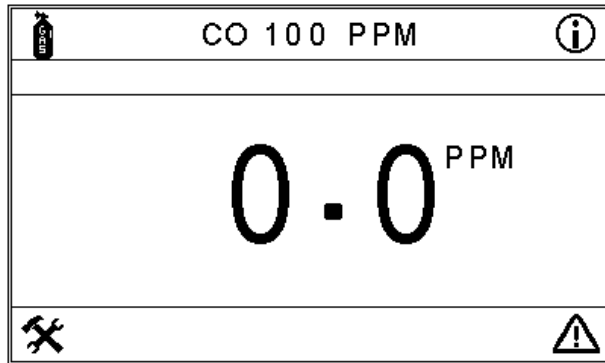


Step 1. Use **i** to go into the information screen.

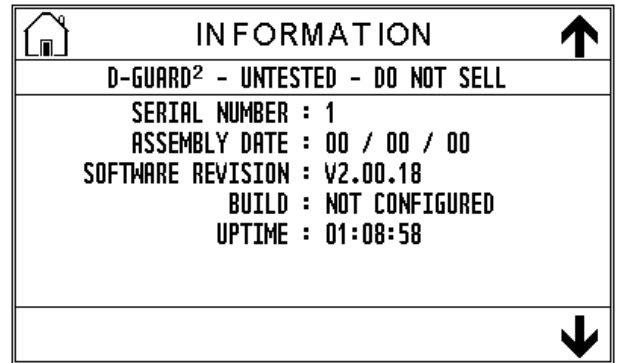


Step 2. Use **↓** to scroll.




Step 3. Use **↓** to scroll.

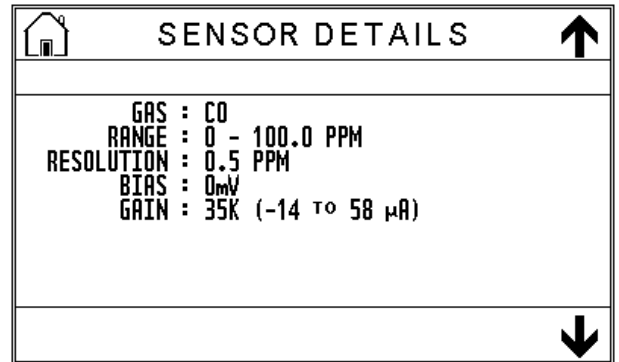

Step 4. Use **🏠** to return to the home screen.

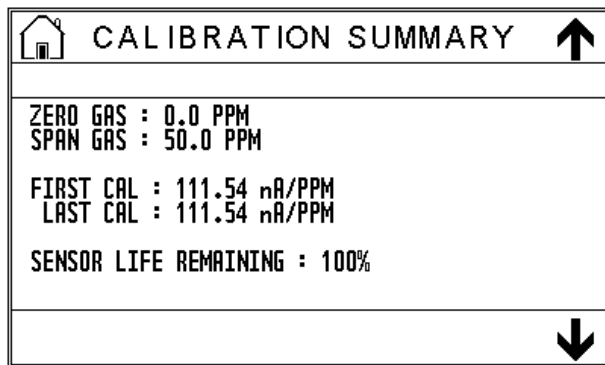

Step 5. Use **↓** to scroll.

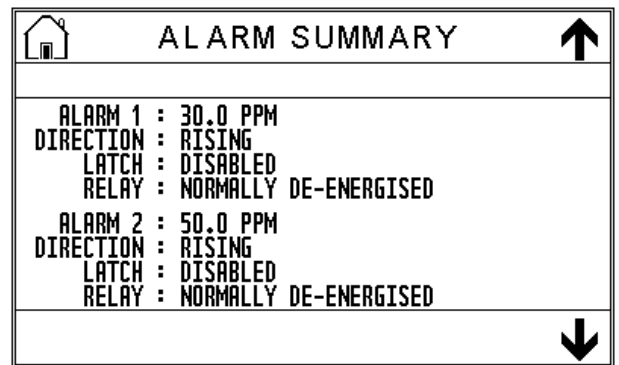


Step 6. Use **🏠** to return to the home screen.


**Note:** The information screens can be scrolled in both directions.

## 17 Status

The status screen gives information on any system status messages generated by the D-Guard<sup>2</sup>S. Make sure the [menu system is unlocked](#).

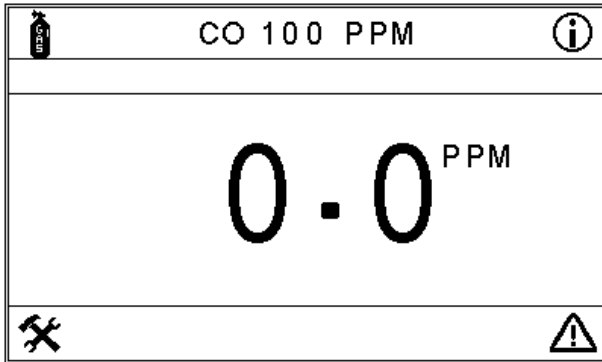


Step 1. Use to go into the information screen.

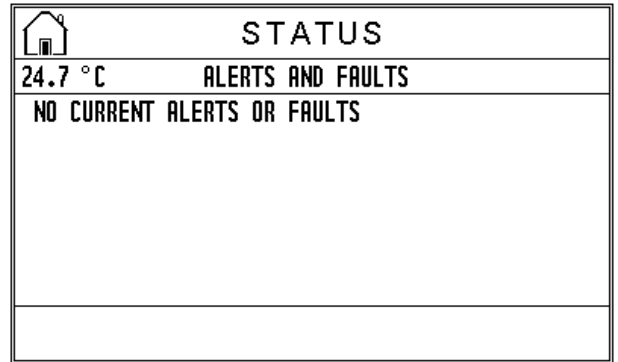


Step 2. Use to return to the home screen.

### 17.1 Clear Latched Alarms

Latched alarms must be cancelled manually.

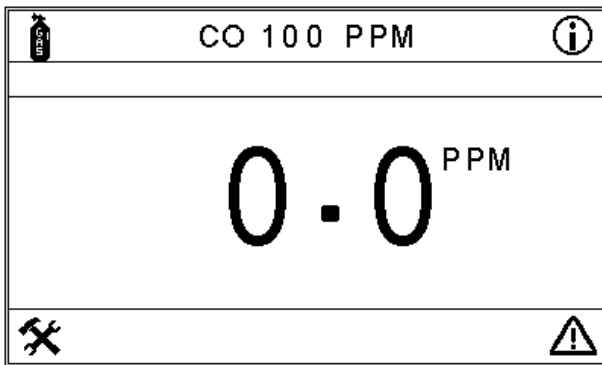

Step 1. Use to go into the status screen.

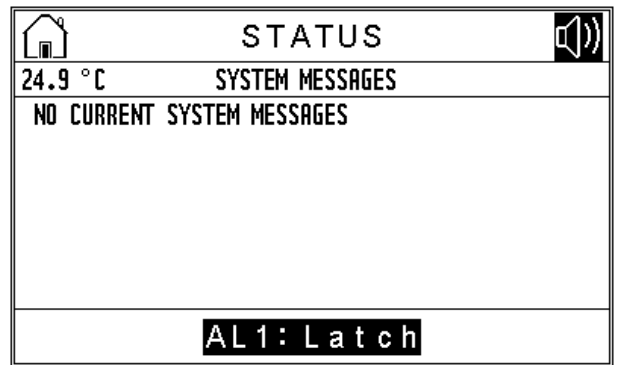

Step 2. Use to cancel the alarm.

**Note:** All latched alarms are cancelled.




## 18 Sensor Settings


The D-Guard<sup>2</sup>S is factory configured when received. Use the Sensor Settings menu to change the user configurable parameters.

### 18.1 Go to the Sensor Settings Menu


Make sure the menu screen is unlocked.

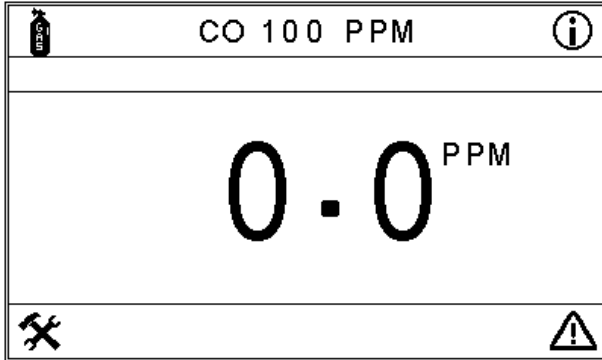

Step 1. Use to go into the settings menu.

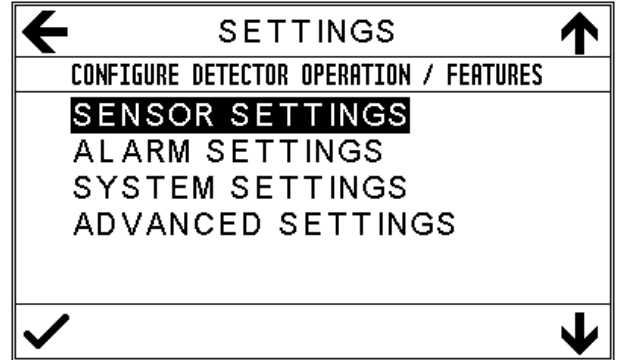


Step 2. Use to go into the sensor settings.

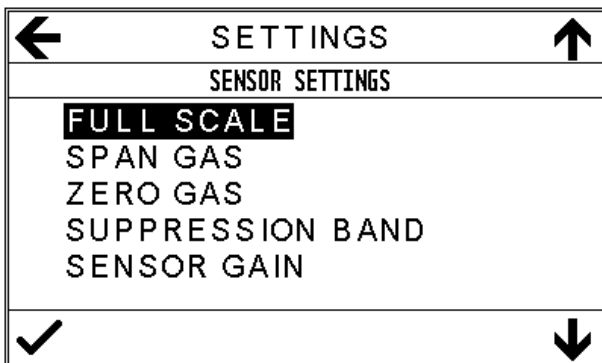


Step 3. Use to go into the full scale menu.

## 18.2 Set Detector Full Scale

The full scale setting is part of the [Sensor settings](#) menu.

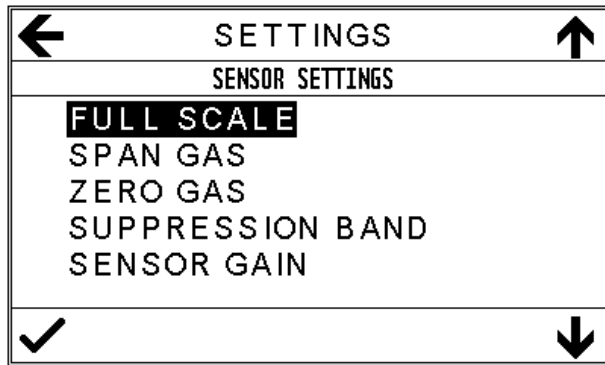


Step 1. Use ✓ to go into the full scale menu.

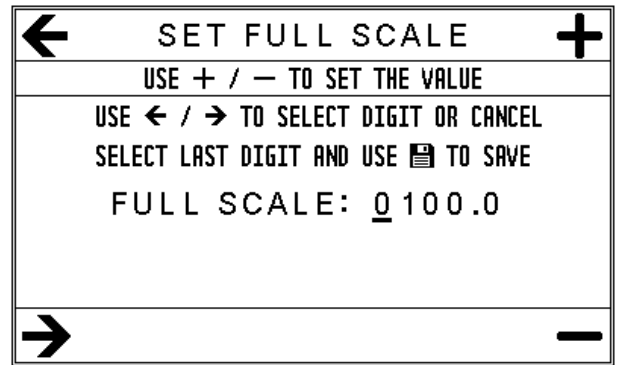


Step 2. Use + - to adjust then [save icon] to save.

**Caution:** The full scale reading cannot be greater than the range of the fitted sensor.

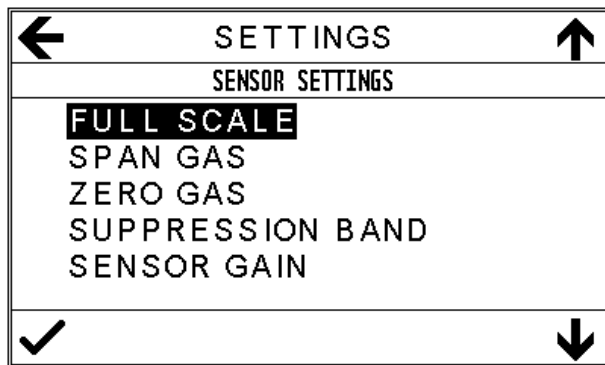

Step 3. Use ← to return to the settings menu.

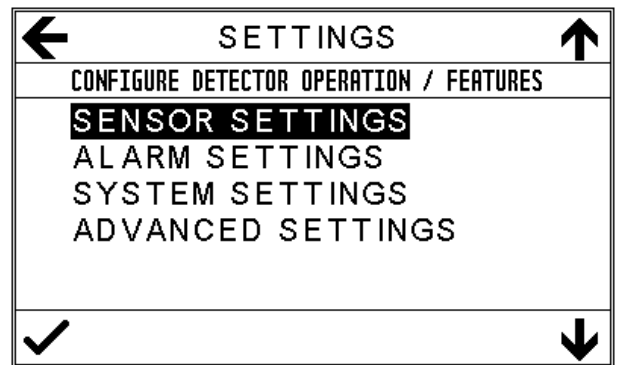

Step 4. Use ← to go back or ↓↑ to continue.

**Caution:** You must adjust the sensor gain if the maximum measurable signal error occurs.


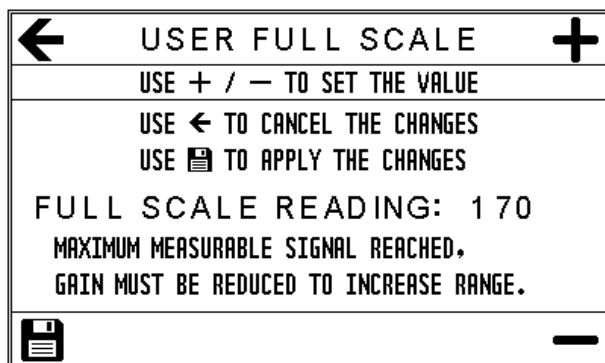



Figure 14. Sensor Gain Warning.

### 18.3 Set Span Gas Concentration


The span gas concentration value is part of the [Sensor Settings Menu](#).

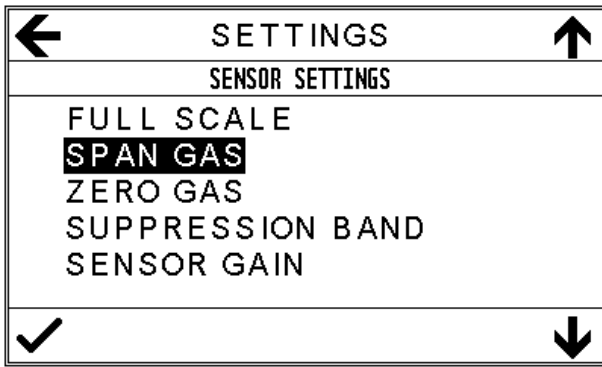


Step 1. Use ← to go back or ✓ to set the span gas.

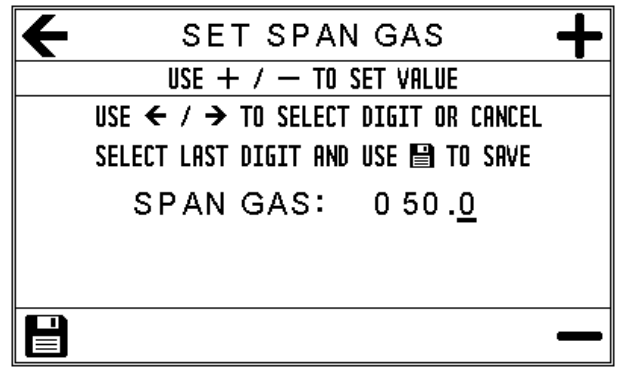

Step 2. Use +- to adjust then [save icon] to save.

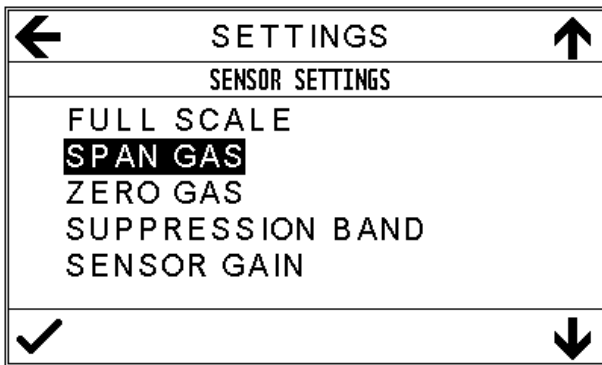

Step 3. Use ← to return to the settings menu.

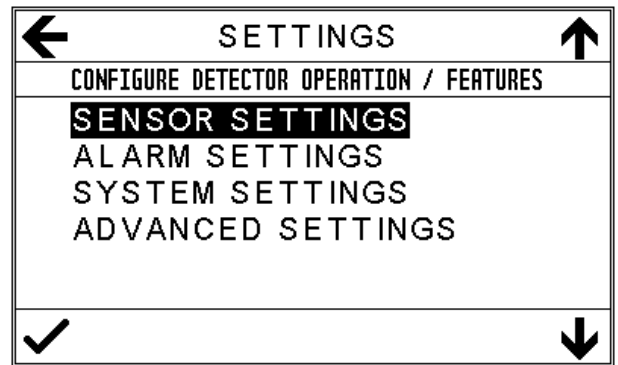

Step 4. Use ← to go back or ↓↑ to continue.

**Caution:** The span gas must be less than or equal to the full scale range. If you try to set the span gas concentration higher the D-Guard<sup>2</sup>S will show you.


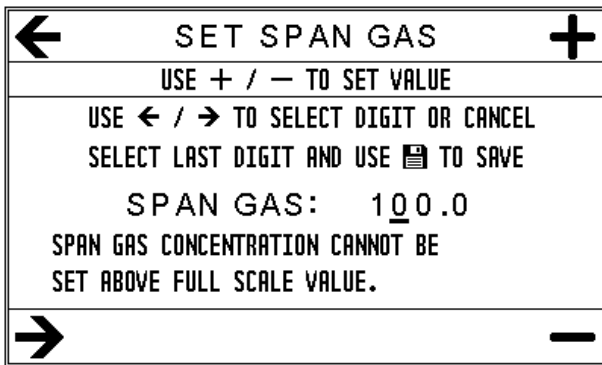



Figure 15. Span Gas Concentration Warning.

### 18.4 Set Zero Gas Concentration


The zero gas concentration is part of the [Sensor Settings Menu](#).

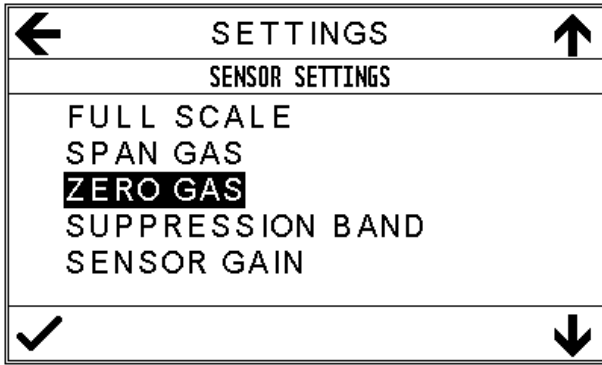


Step 1. Use ← to go back or ✓ to set the zero gas.

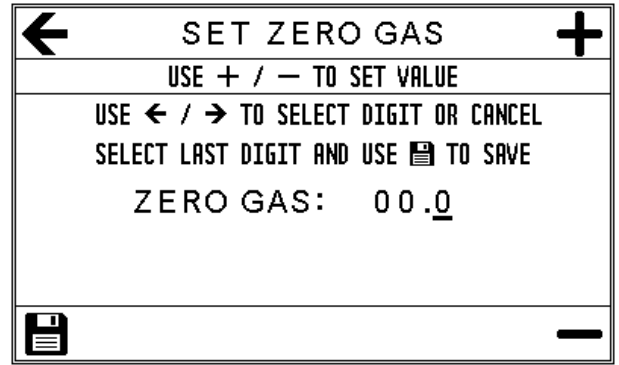

Step 2. Use +- to adjust then [save icon] to save.

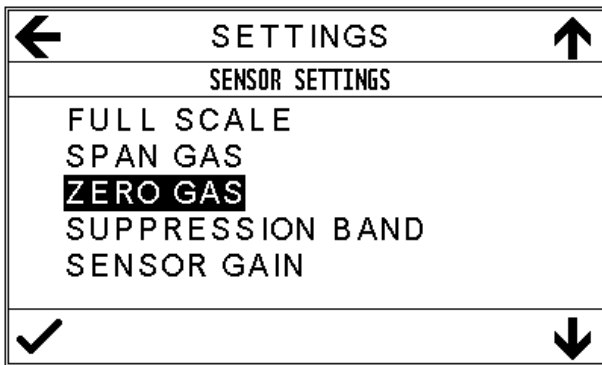

Step 3. Use ← to return to the settings menu.

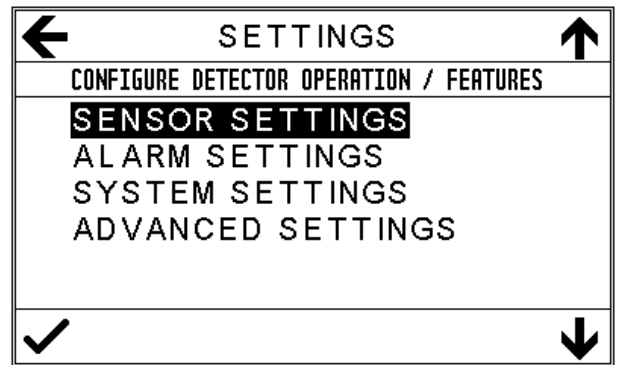

Step 4. Use ← to go back or ↓↑ to continue.

**Caution:** The zero gas must not be less than zero. If you try to set the zero gas concentration less than zero the D-Guard<sup>2</sup>S will show you.

**Note:** Fresh air can be used in place of zero-grade air.

**Caution:** Do not use fresh air for carbon dioxide sensor zero calibration. Fresh air contains low levels of carbon dioxide. You must use zero grade air or nitrogen instead.


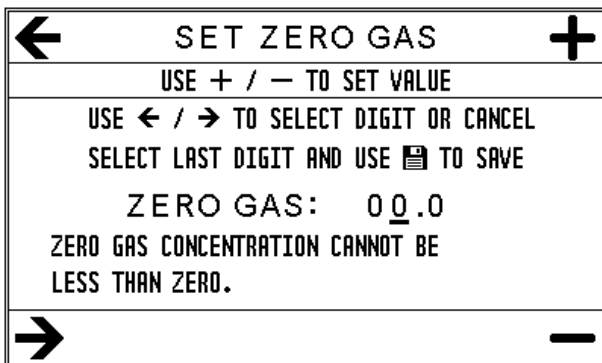


Figure 16. Zero Gas Concentration Warning.


### 18.5 Set Suppression Band

The suppression band prevents the D-Guard<sup>2</sup>S from displaying small changes in the detected gas level close to zero. It is set to 1% of the full scale value and can be on or off.


The suppression band setting is part of the [Sensor Settings Menu](#).

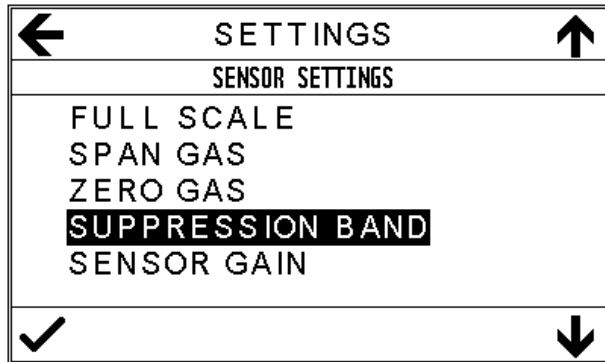


Step 1. Use ← to go back or ✓ to set the suppression band.

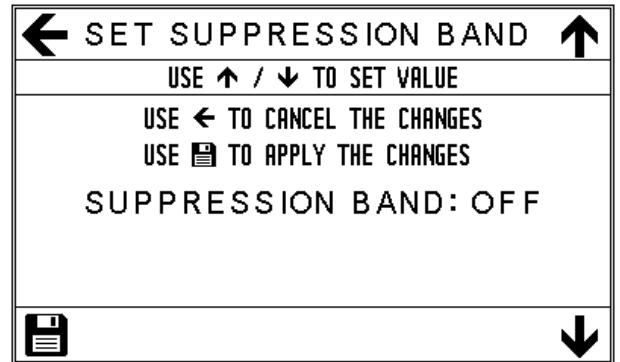

Step 2. Use ↓ ↑ to adjust then [save icon] to apply.

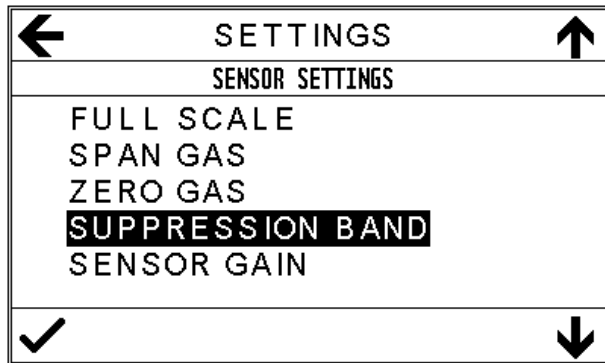

Step 3. Use ← to return to the settings menu.

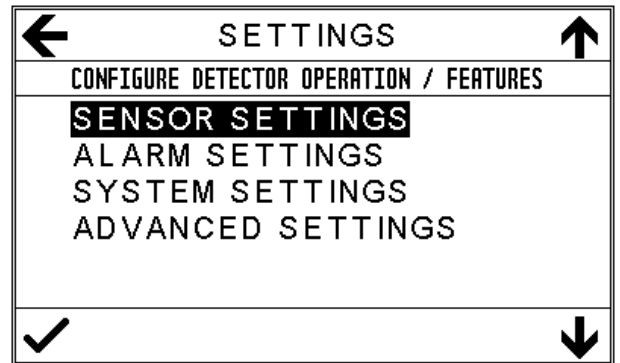


Step 3. Use ← to go back or ↓ ↑ to continue.

### 18.6 Sensor Gain

You can select a sensor type from the [Sensor Presets](#) menu. The sensor gain is automatically set.


You can adjust the sensor gain to compensate for differences between sensors of the same type or to change the full scale value for a sensor.

The sensor gain setting is part of the [Sensor Settings Menu](#).

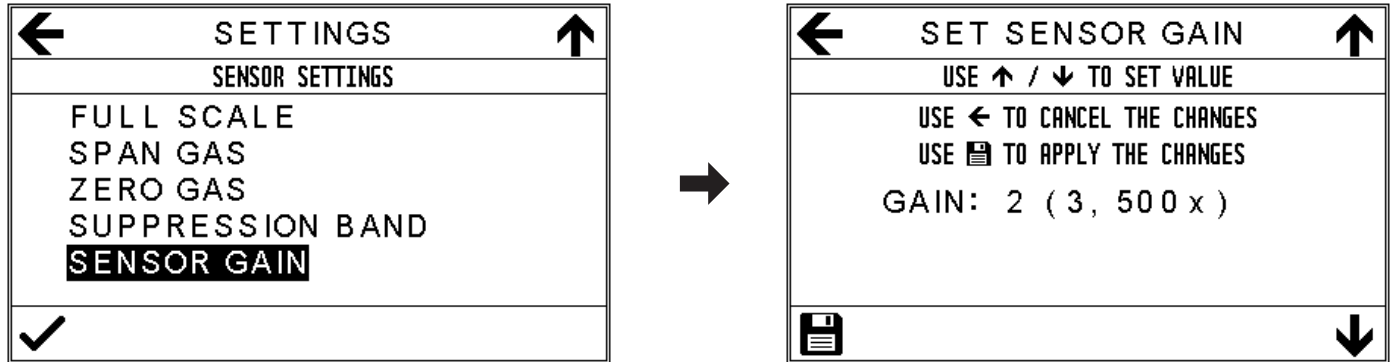

Step 1. Use ← to go back or ✓ to set the sensor gain.

Step 2. Use ↓↑ to adjust then 💾 to apply.

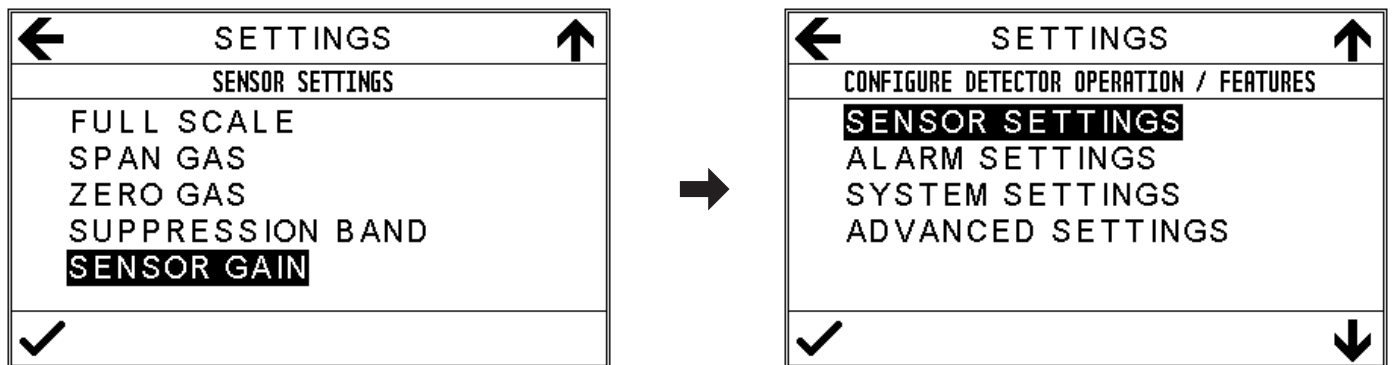

Step 3. Use ← to go back to the settings menu.

Step 3. Use ← to go back or ↓↑ to continue.

**Caution:** The sensor gain and the full scale value effect each other. If you try to set the gain too high the D-Guard<sup>2</sup>S will show you.

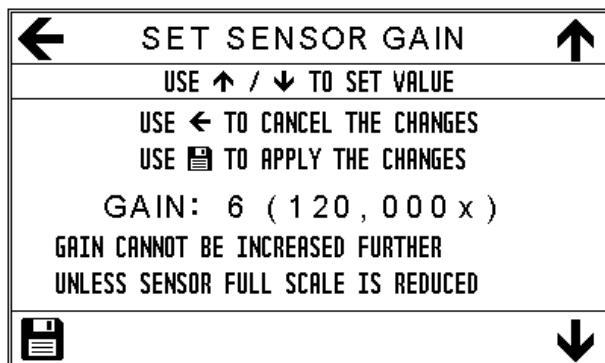


Figure 17. Sensor gain warning


## 19 Alarm Settings

You can configure the D-Guard<sup>2</sup>S alarms. The D-Guard<sup>2</sup>S has two alarms: Alarm 1 (AL1) and Alarm 2 (AL2).


All alarm settings can be configured independently of each other.

### 19.1 Go to the Alarm Settings menu


Make sure the [menu system is unlocked](#).

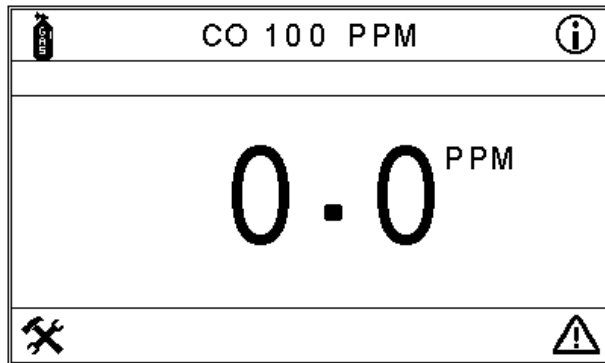


Step 1. Use to go into the settings menu.

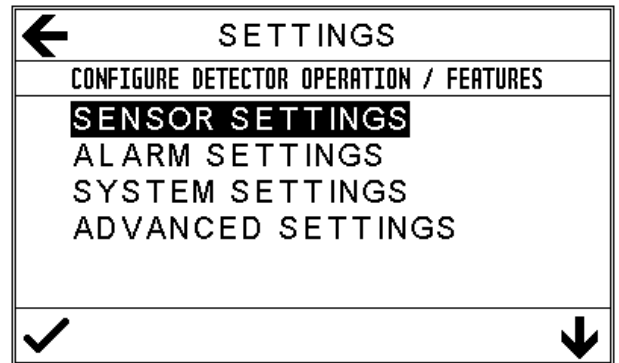

Step 2. Use to highlight the alarm settings.

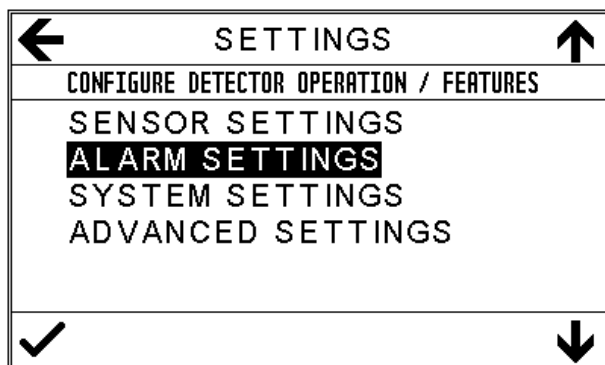

Step 3. Use to go into the menu.

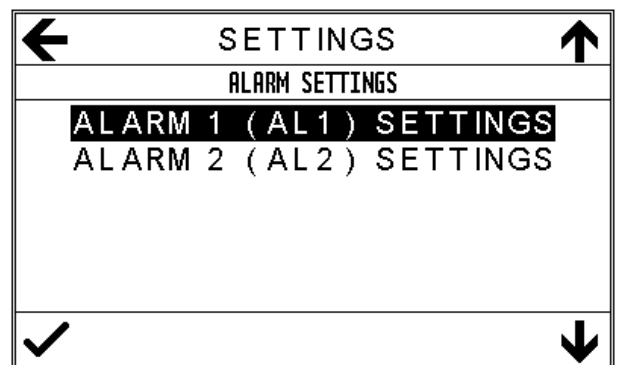


Step 4. Use then to continue.


## 19.2 Alarm Direction

The alarm direction setting is part of the [Alarm Settings Menu](#).


**Caution:** You can set the alarm direction for each alarm independently. The options are rising or falling.

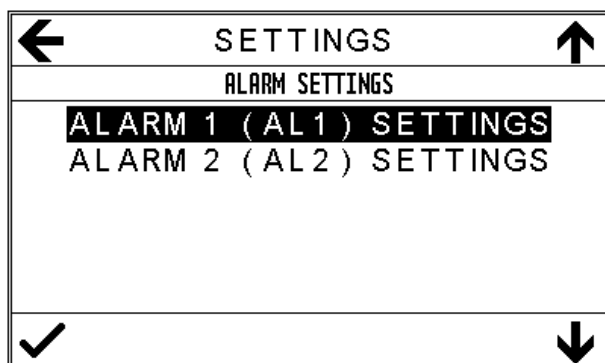


Step 1. Use ← to go back or ✓ to set the alarms.

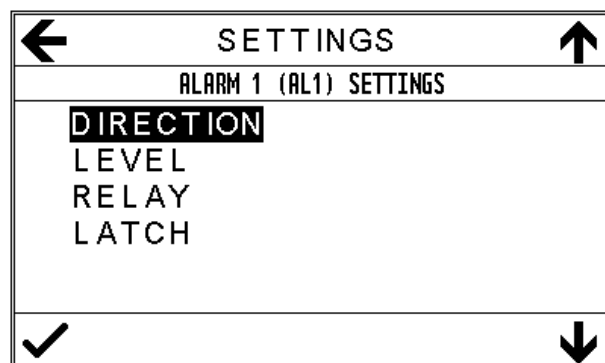

Step 2. Use ✓ to go into the direction menu.

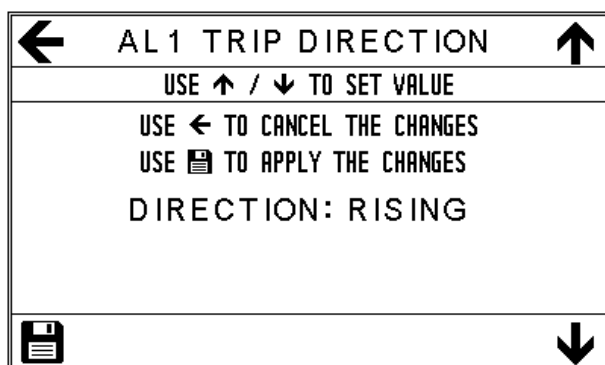

Step 3. Use ↓↑ then [Save Icon] to apply.

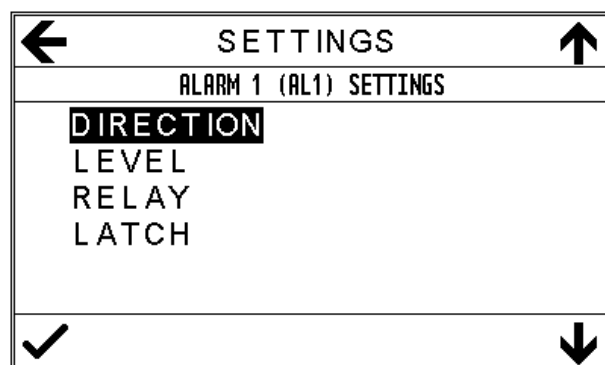


Step 4. Use ← to go back or ✓ to continue.




### 19.3 Alarm Level


The alarm level setting is part of the [Alarm Settings Menu](#).

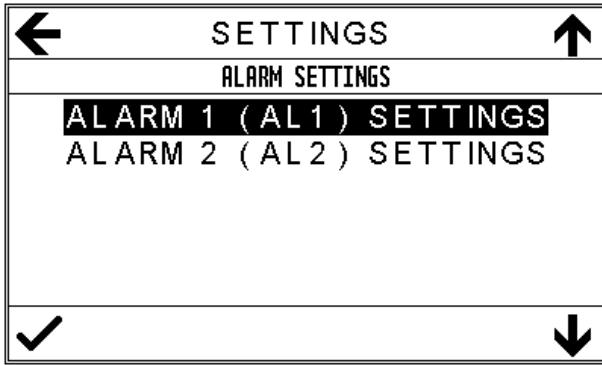


Step 1. Use ← to go back or ✓ to continue.

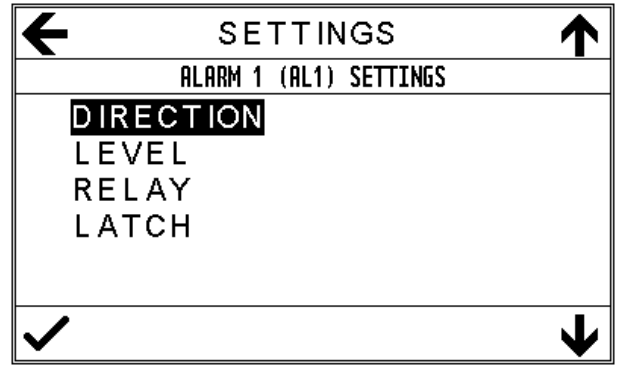

Step 2. Use ↓↑ to highlight the level menu.

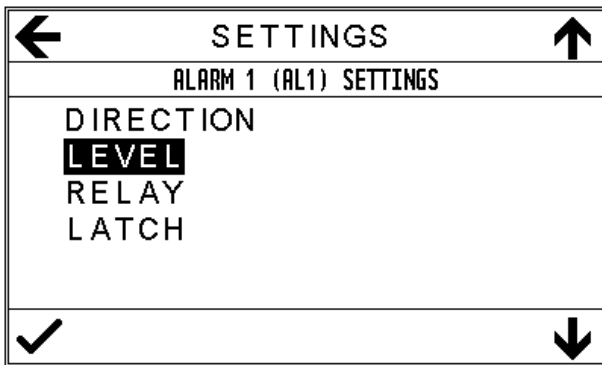

Step 3. Use ✓ to go into the level menu.

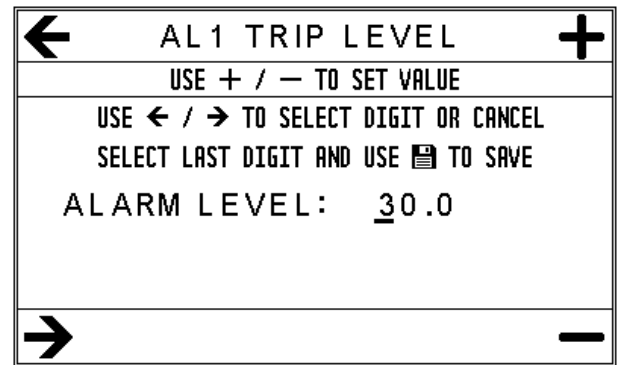

Step 4. Use + - to adjust then [SAVE] to save.

**Caution:** You must not try to set an alarm level that is less than zero or greater than the full scale. The D-Guard<sup>2</sup>S will show these errors.

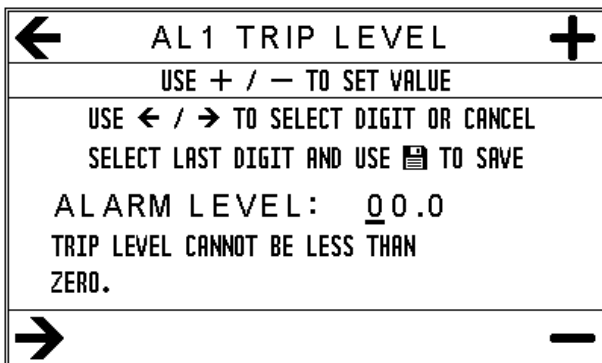


Figure 18. Minimum alarm level warning.

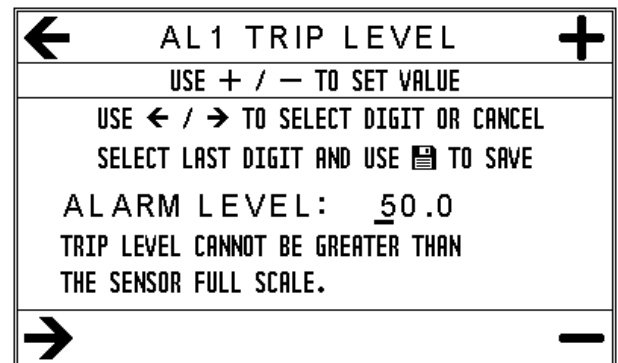



Figure 19. Maximum alarm level warning.

### 19.4 Alarm Relay state


The D-Guard<sup>2</sup>S version has two user configurable relay outputs. You can adjust the initial state of the alarm relays. The options are de-energised or energised.

The D-Guard<sup>2</sup>S has an additional fault relay. This is not user configurable.


The alarm relay state setting is part of the [Alarm Settings Menu](#).

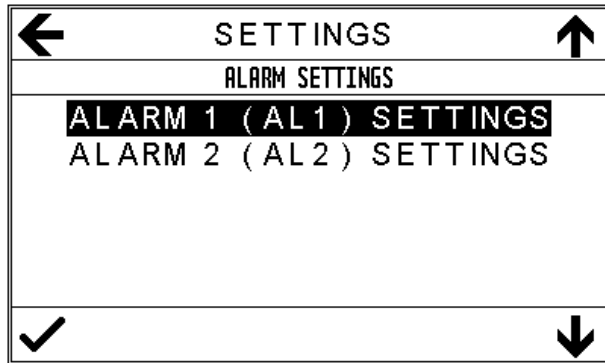


Step 1. Use ← to go back or ✓ to continue.

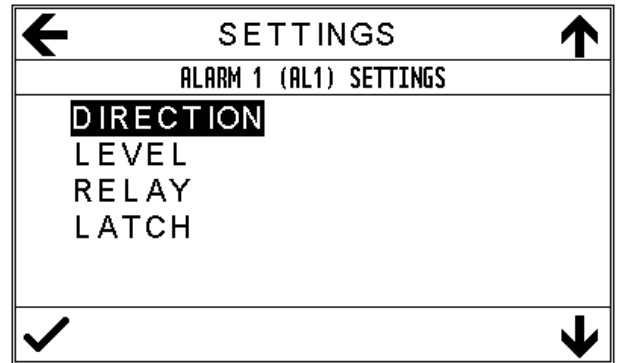


Step 2. Use ↓ ↑ to highlight the relay menu.

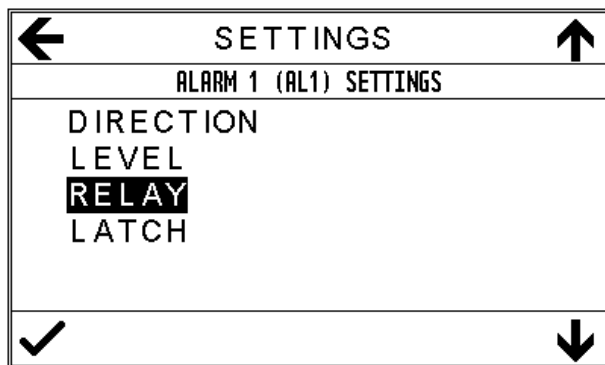

Step 3. Use ✓ to go into the relay menu.

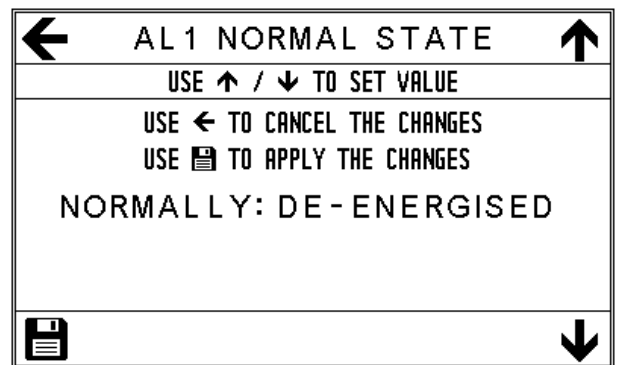

Step 4. Use ↓ ↑ to adjust then [save icon] to apply.

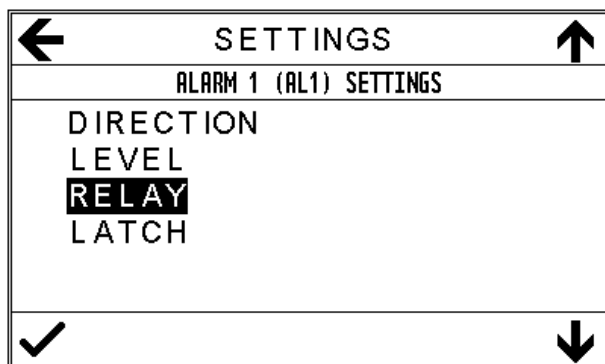


Step 5. Use ← to go back or ✓ to continue.


## 19.5 Alarm Latch

The D-Guard<sup>2</sup>S alarms can be set as latching alarms (LATCH: ENABLED) or as non-latching alarms (LATCH: DISABLED).


The alarm latch setting is part of the [Alarm Settings Menu](#).

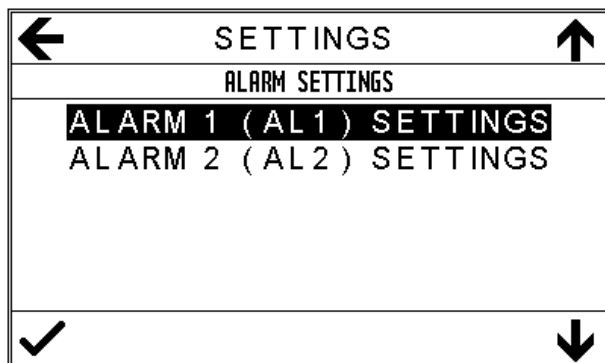


Step 1. Use ← to go back or ✓ to continue.

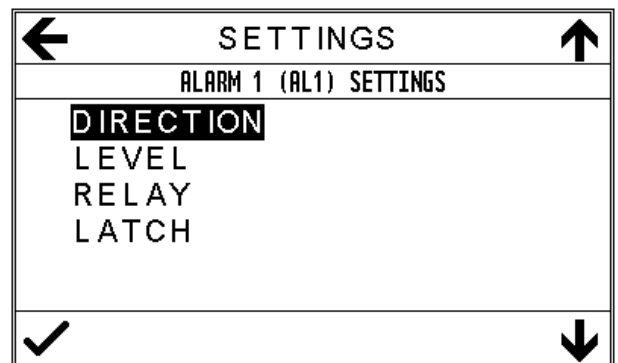


Step 2. Use ↓↑ to highlight the latch menu.

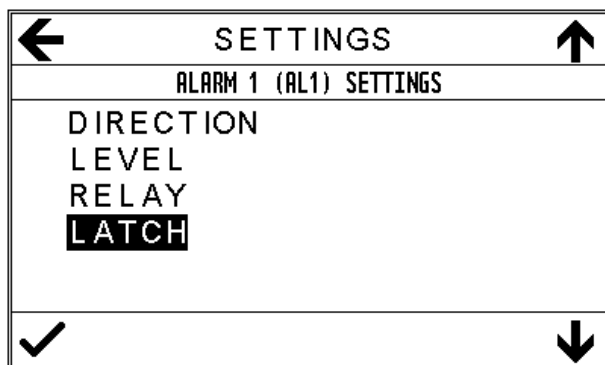

Step 3. Use ✓ to go into the latch menu.

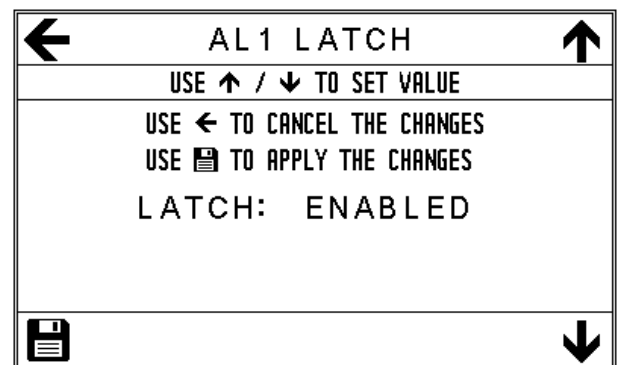

Step 4. Use ↓↑ to adjust then [Save Icon] to apply.

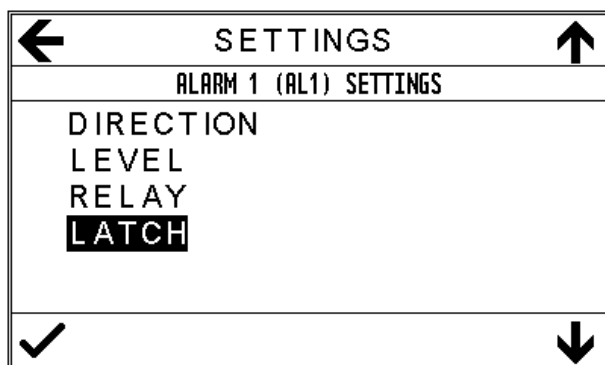

Step 5. Use ← to go back or ✓ to continue.

## 19.6 Latched Alarm Examples

**Caution:** You must [clear the latched alarm](#) manually. Alarms will not reset automatically when the detected gas concentration has fallen below the set alarm level.

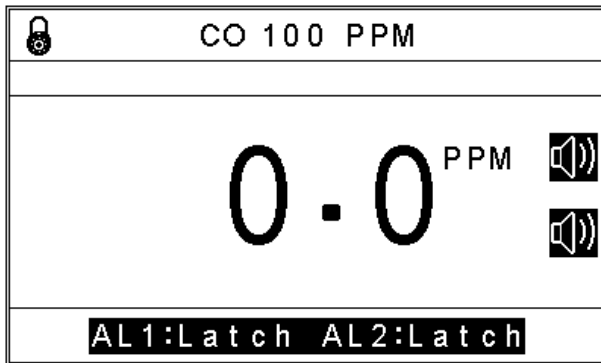


Figure 20. AL1 and AL2 Latched.

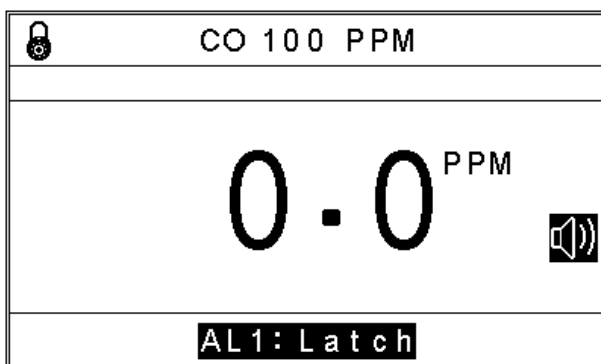


Figure 21. AL1 Latched.

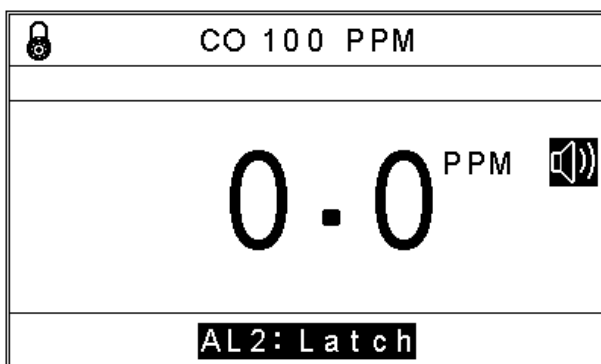



Figure 22. AL2 Latched.


## 20 System Settings


You can configure the Passcode. You can isolate the D-Guard<sup>2</sup>S if required.



### 20.1 Access the System Settings

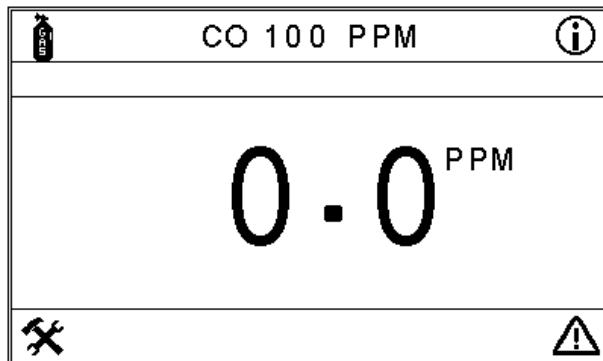
Make sure the [menu system is unlocked](#).

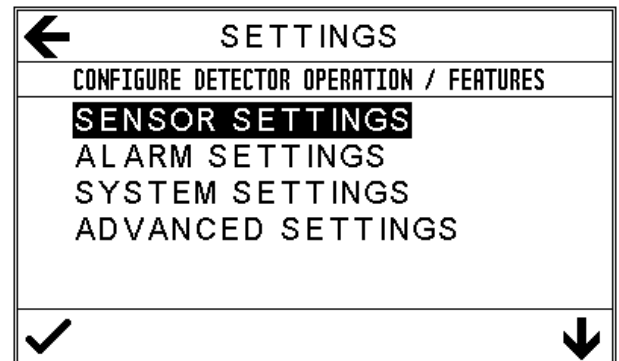


Step 1. Use  to go into the settings menu.





Step 2. Use   to highlight the system settings menu.

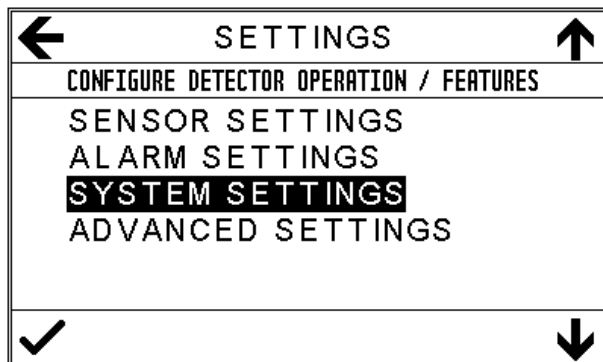


Step 3. Use  to go into the menu.

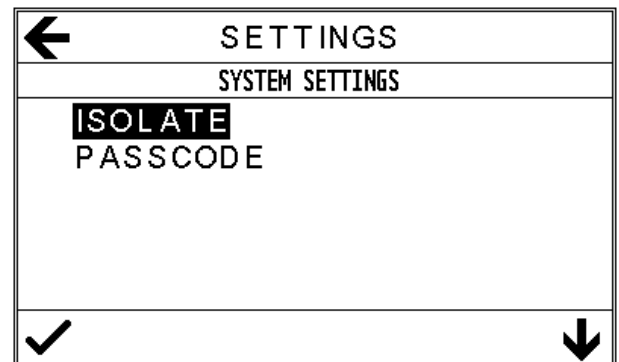


Step 4. Use  to go back or  to continue.

## 20.2 Isolate


You can isolate the D-Guard<sup>2</sup>S if required. The 4-20mA output will be set to 3.5mA when isolated. The isolate setting is part of the [System Settings menu](#).

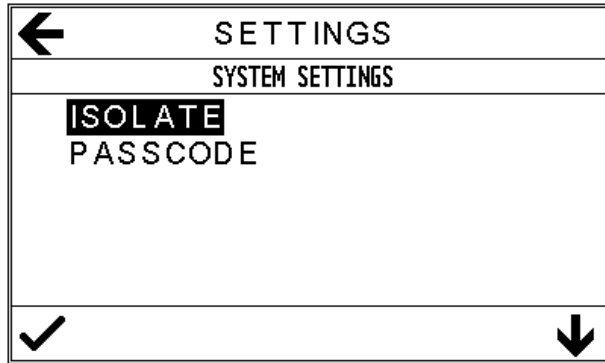


Step 1. Use ✓ to go into the isolate menu.

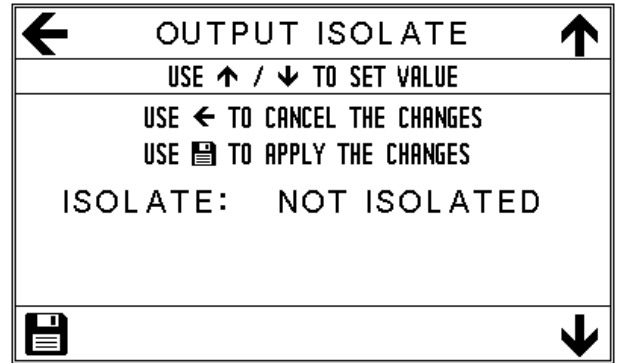

Step 2. Use ↓↑ to adjust then [save icon] to apply.

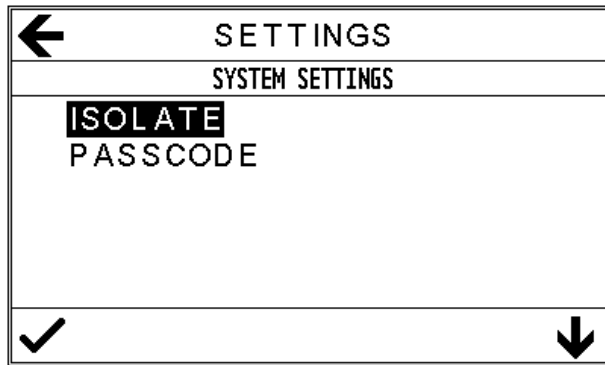

Step 3. Use ← to go back.

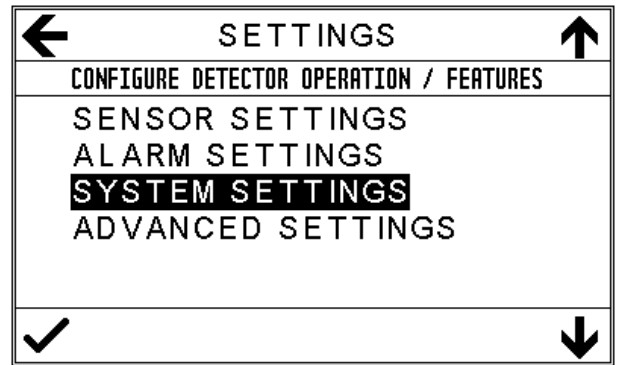

Step 4. Use ← to go back.

**Warning:** The D-Guard<sup>2</sup>S does not transmit detected gas concentrations when isolated. This can result in injury or death to personnel.

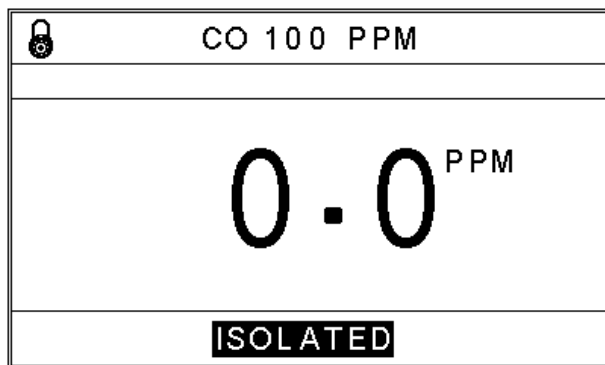



Figure 23. D-Guard<sup>2</sup>S home screen when isolated.

**Caution:** When the D-Guard<sup>2</sup>S is isolated the 4-20mA output is set to the fault current of 3.5mA. The screen will show the detected level of gas. External control equipment will not receive gas concentration readings.


### 20.3 Set Passcode

You can set the D-Guard<sup>2</sup>S passcode. The passcode limits access to the configuration and operation of the D-Guard<sup>2</sup>S.


The passcode settings are part of the [System Settings menu](#).

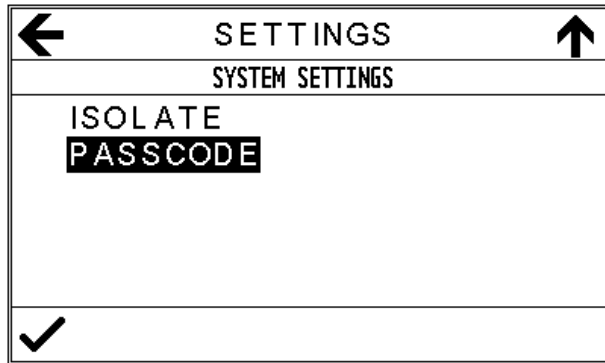


Step 1. Use ✓ to go into the passcode menu.

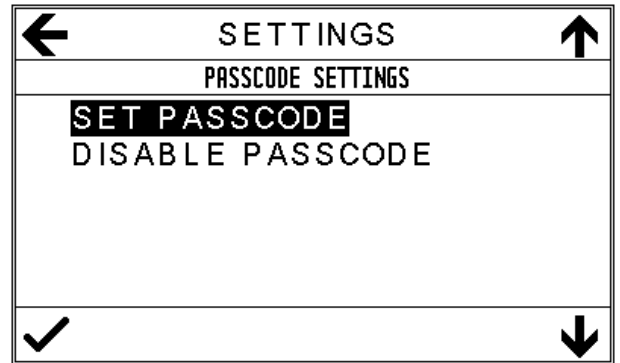


Step 2. Use ← to go back or ✓ to continue.

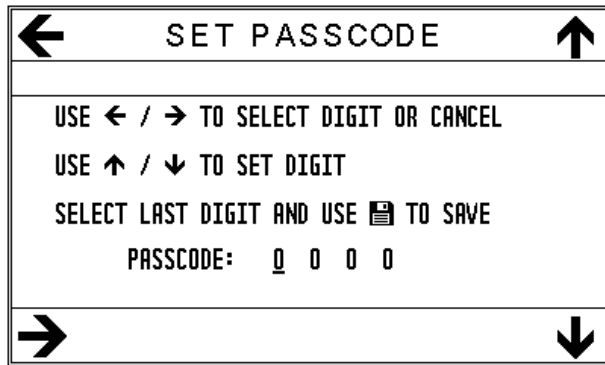

Step 3. Use ↓↑ to set the value of the digit then use → to apply.

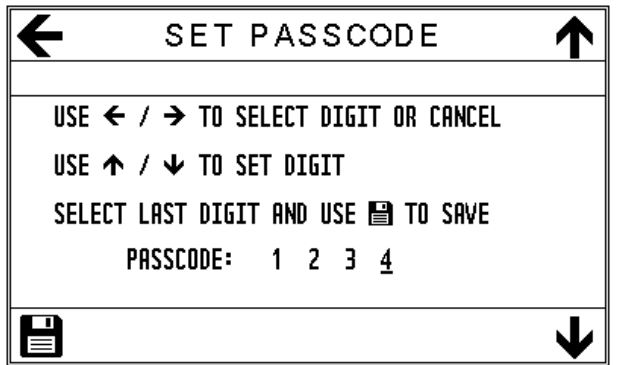

Step 4. Use ↓↑ to set the value of the digit and use [Save Icon] to save.

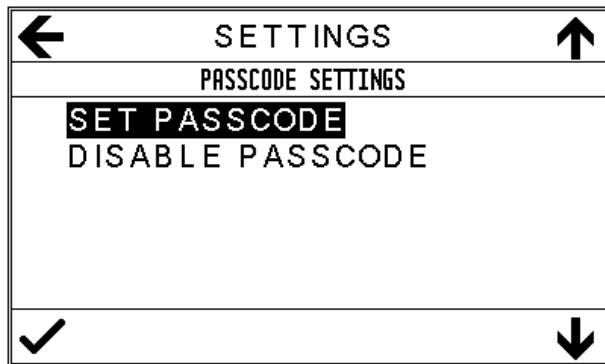


Step 5. Use ← to go back or ✓ to continue.

**Caution:** If you forget the passcode, you must return the D-Guard<sup>2</sup>S to a Gastech Service Centre.


## 20.4 Disable Passcode

You can disable the D-Guard<sup>2</sup>S passcode. The passcode limits access to the configuration and operation of the D-Guard<sup>2</sup>S.


The passcode settings are part of the [System Settings menu](#).

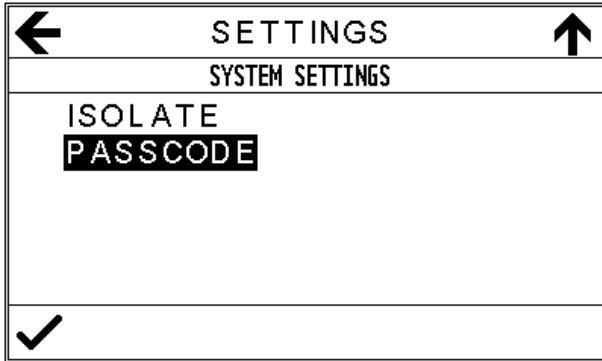


Step 1. Use ✓ to go into the passcode menu.

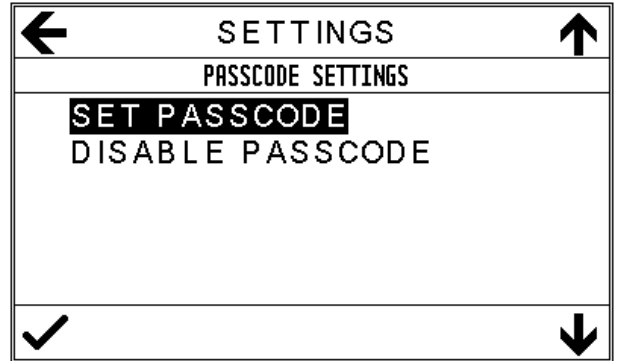

Step 2. Use ↓↑ to highlight the disable passcode menu.

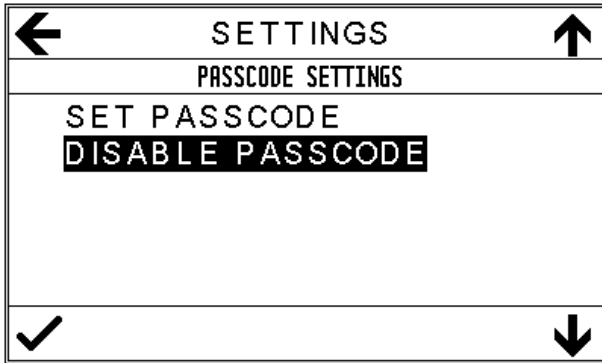

Step 3. Use ✓ to go into the disable passcode menu.

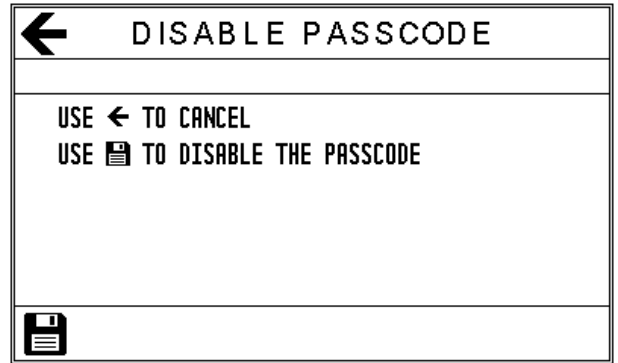

Step 4. Use ← to go back or [save icon] to disable the passcode.

**Caution:** If you forget the passcode, you must return the D-Guard<sup>2</sup>S to a Gastech Service Centre.




## 21 Advanced Settings


You can configure the D-Guard<sup>2</sup>S advanced settings.

### 21.1 Go to the Advanced Settings Menu


Make sure the [menu system is unlocked](#).

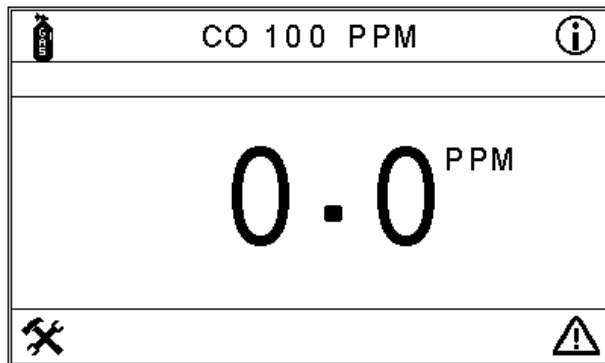


Step 1. Use to go into the settings menu.

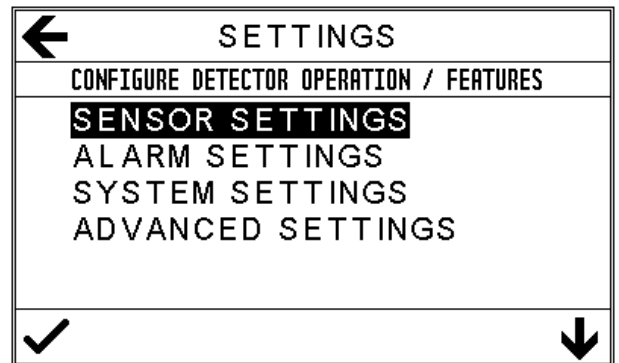

Step 2. Use to highlight advanced settings.

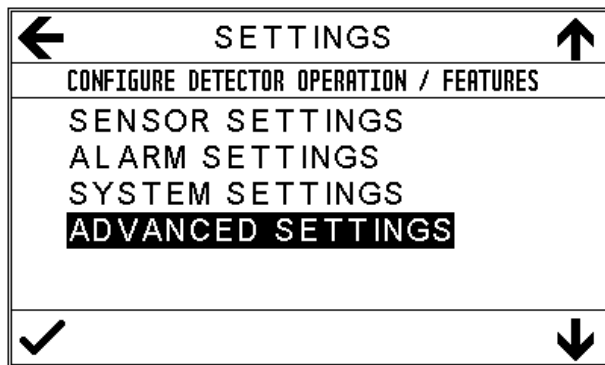

Step 3. Use to go into the advanced settings menu.

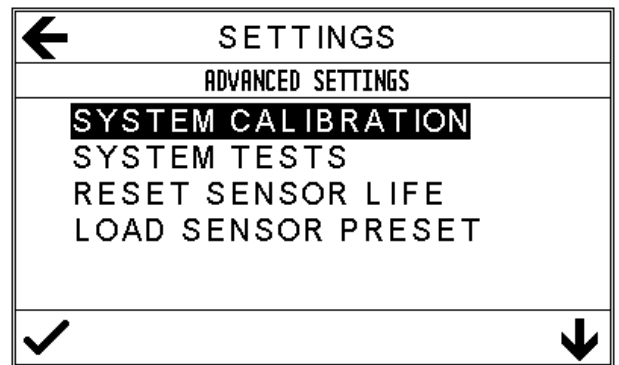


Step 4. Use then to continue.


## 21.2 System Calibration

You can adjust the D-Guard<sup>2</sup>S 4-20mA current loop output.


The system calibration options are part of the [Advanced Settings menu](#).

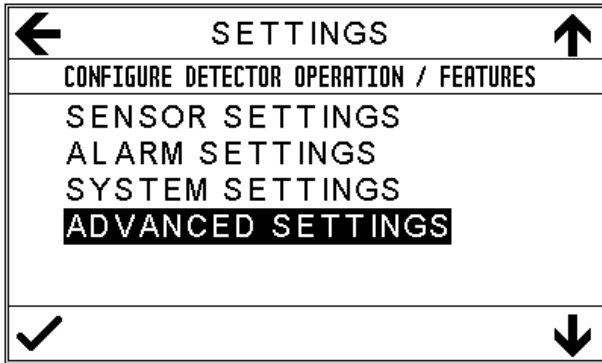


Step 1. Use ✓ to go into the advanced settings menu.

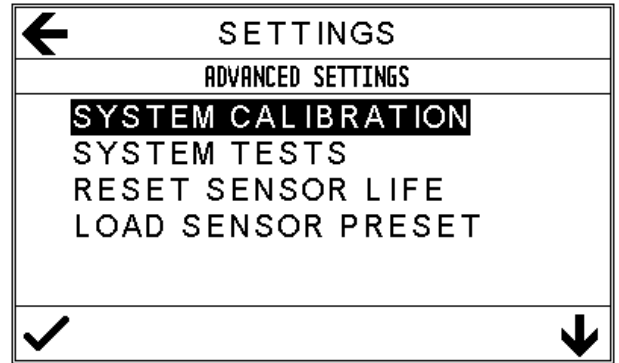


Step 2. Use ✓ to go into the system calibration menu.

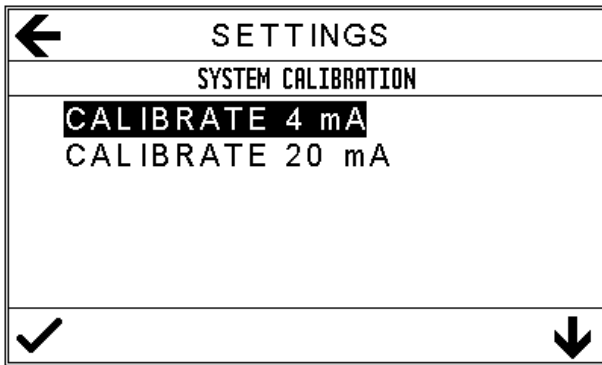

Step 3. Use ↓↑ or ✓ to go into the menu.

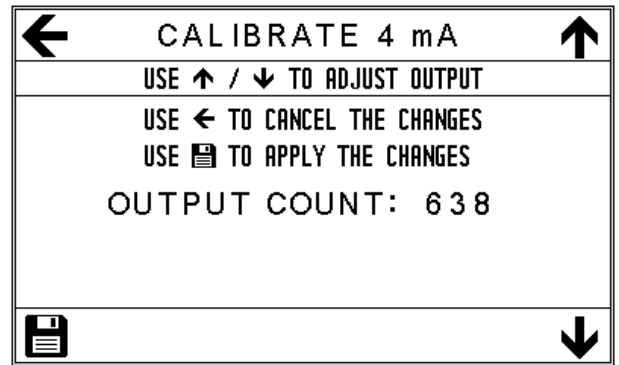

Step 4. Use ↓↑ to adjust the output then [save icon] to save.

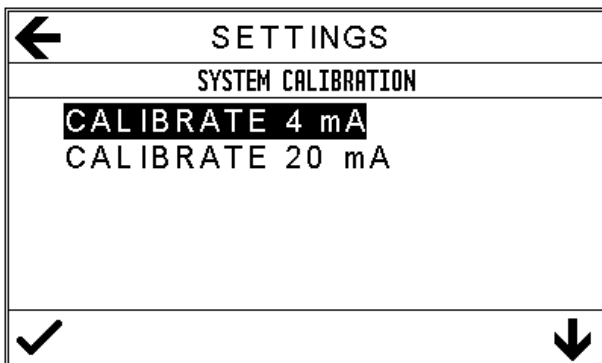


Step 5. Use ← to go back or ✓ to continue.

**Note:** The Output Count value provides visual feedback as the output is adjusted.


### 21.3 4-20mA Output Test

You can test the D-Guard<sup>2</sup>S 4-20mA current loop output.


The 4-20mA output test is part of the [Advanced Settings menu](#).

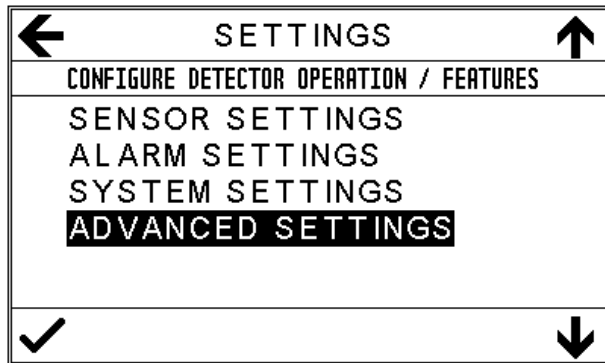


Step 1. Use ✓ to go into the advanced settings menu.

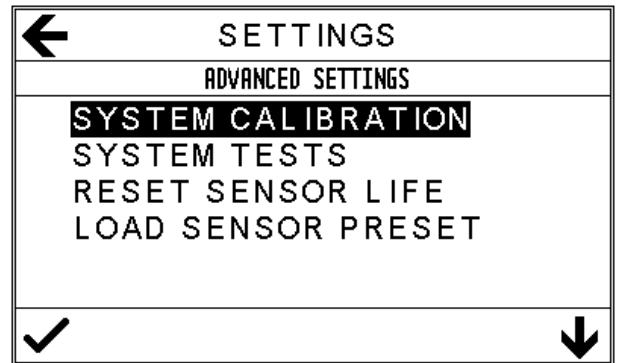


Step 2. Use ↓ to highlight the systems tests.

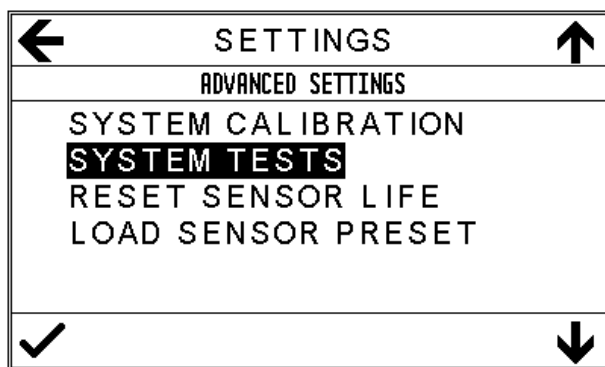

Step 3. Use ✓ to go into the systems tests.

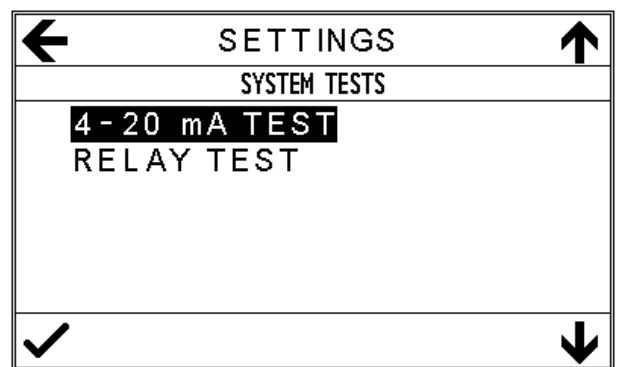

Step 4. Use ✓ to go into the 4-20mA test.

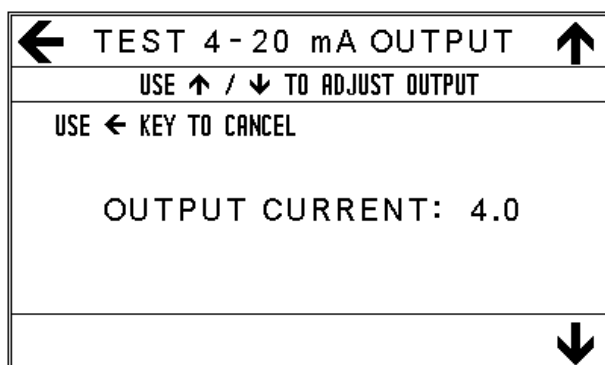


Step 5. Use ↓↑ to change or ✓ to cancel.

**Caution:** You must check external equipment before the output is tested. Failure to do so may trigger external control systems.


## 21.4 Relay Function Test

You can test the D-Guard<sup>2</sup>S relays.


The relay function test is part of the [Advanced Settings menu](#).

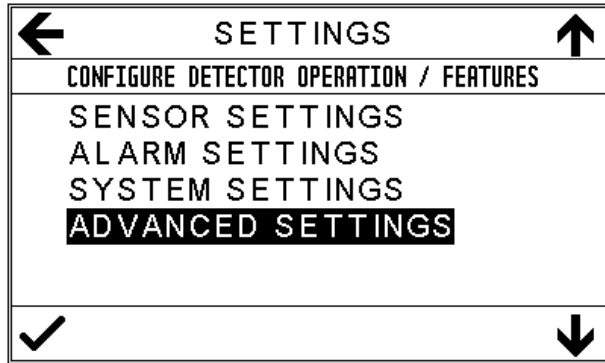


Step 1. Use ✓ to go into the advanced settings menu.

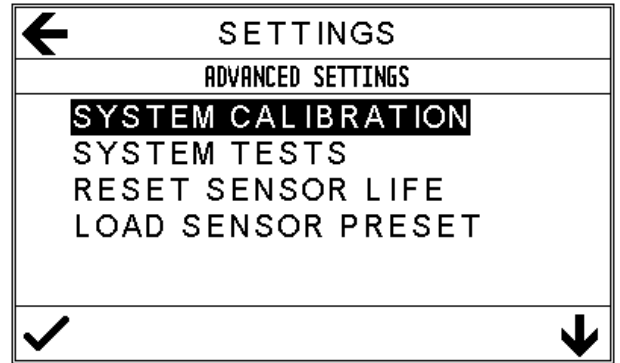


Step 2. Use ↓ to highlight system tests.

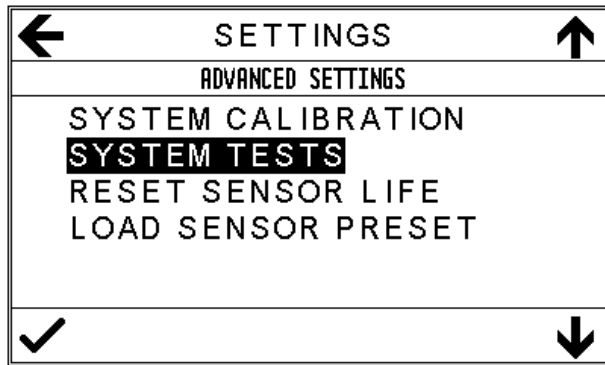


Step 3. Use ✓ to go into the system tests menu.

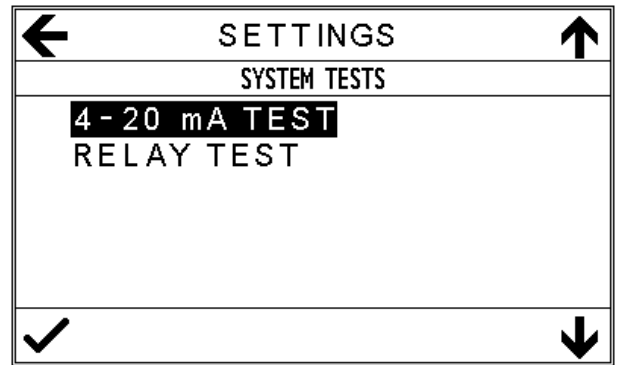

Step 4. Use ↓ to highlight the relay test.

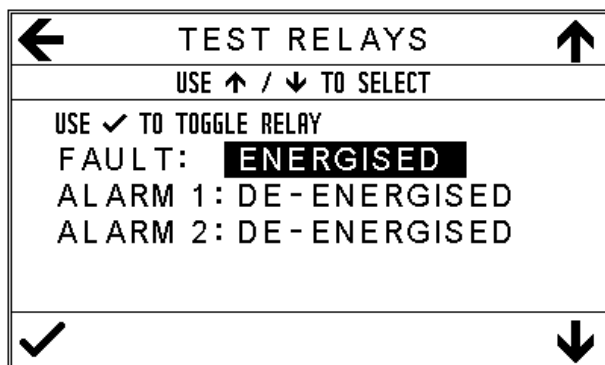

Step 5. Use ✓ to toggle or ↓↑ to select the relay.

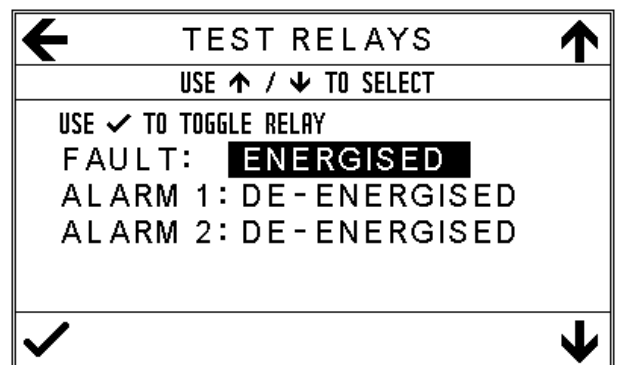


Step 6. Use ← to go back.


## 21.5 Reset Sensor Life

You can reset the D-Guard<sup>2</sup>S estimated life of the fitted sensor. You must reset the Sensor Life setting when a replacement sensor is fitted.


The reset sensor option is part of the [Advanced Settings menu](#).

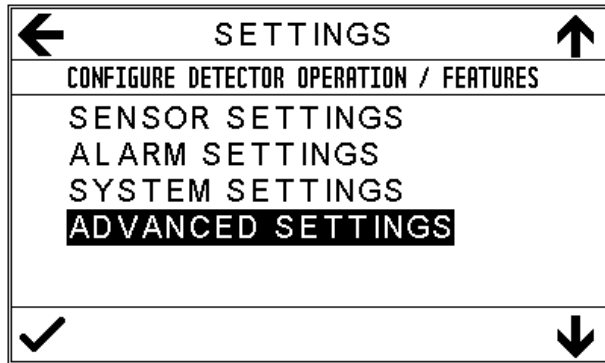


Step 1. Use ✓ to go into the advanced settings menu.

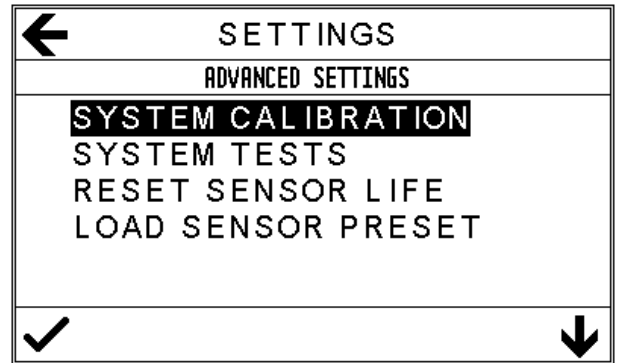


Step 2. Use ↓ to highlight the reset sensor life menu.

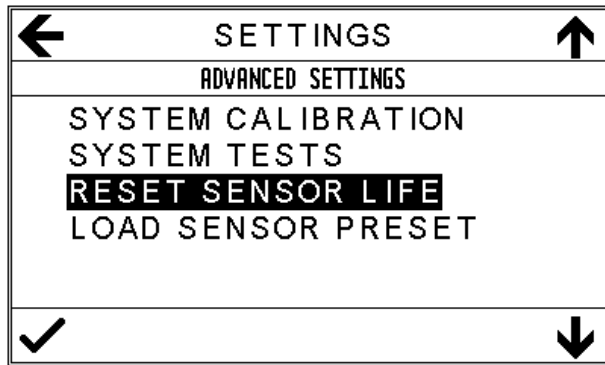

Step 3. Use ✓ to go into the reset sensor life menu.

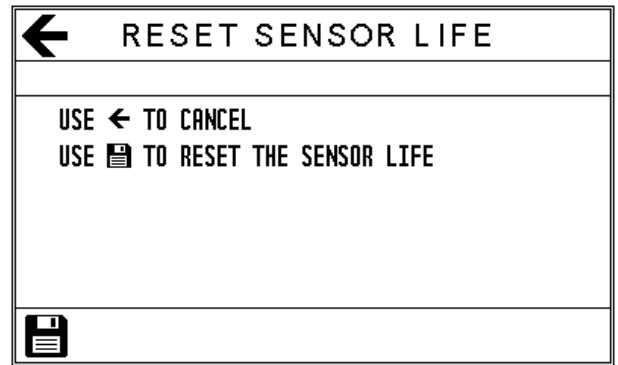

Step 4. Use [Save Icon] to reset the sensor life.

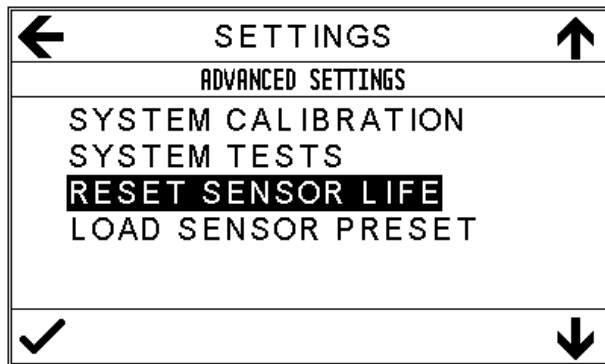

Step 5. Use ← to go back.


**Note:** The D-Guard<sup>2</sup>S calculates the life of the sensor by comparing the most recent calibration data with the original stored calibration data.

**Caution:** The Sensor Life value is for indication purposes only. It can be viewed on the information screen.


## 21.6 Sensor Presets

You can use this menu to load one of the D-Guard<sup>2</sup>S sensor presets.


The sensor presets are part of the [Advanced Settings menu](#).

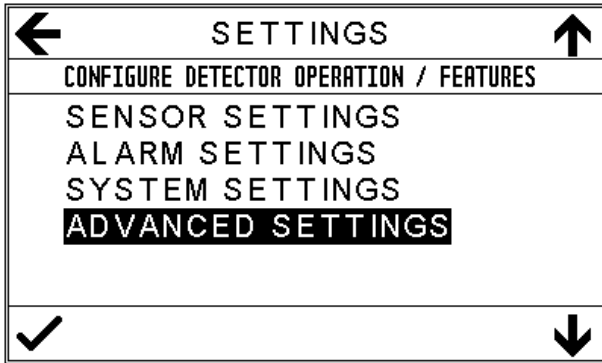


Step 1. Use ✓ to go into the advanced settings menu.

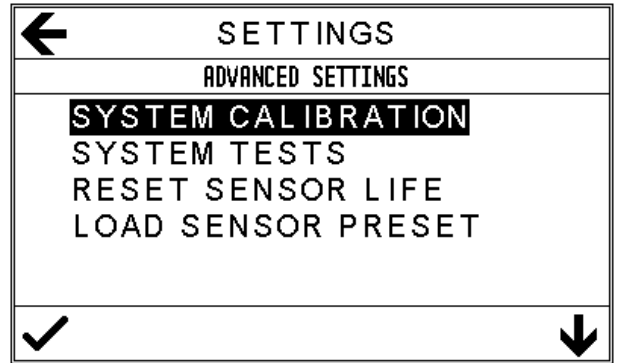


Step 2. Use ↓ to highlight the load sensor preset menu.

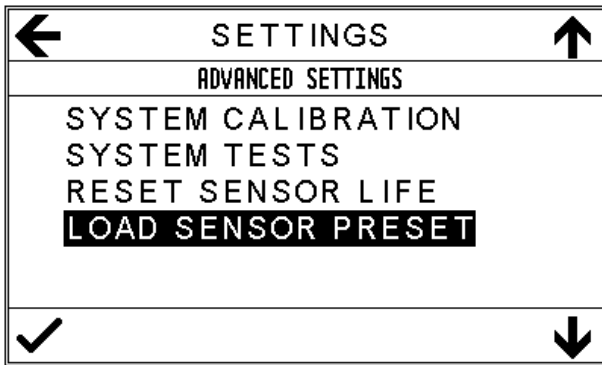

Step 3. Use ✓ to go into load sensor preset menu.

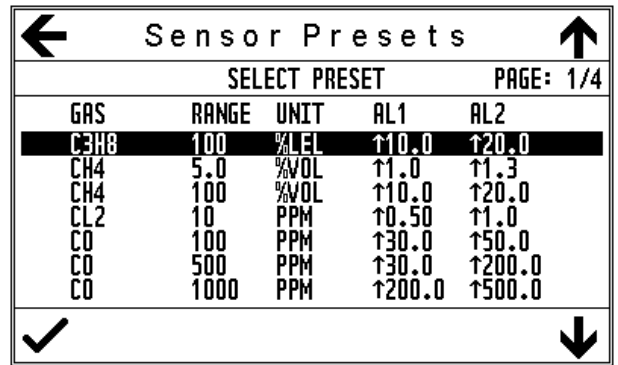

Step 4. Use ← to go back or ✓ to load preset.

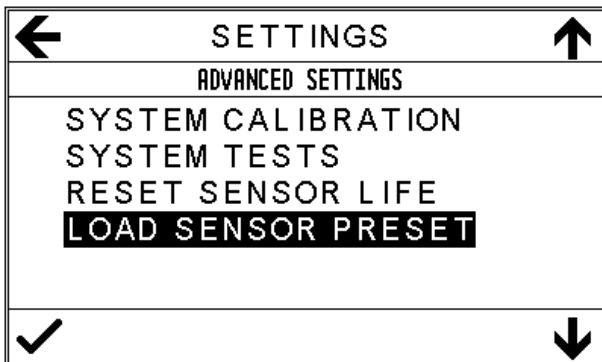

Step 5. Use ← to go back.

**Warning:** If the Sensor Preset is changed the D-Guard<sup>2</sup>S must be re calibrated before use. Incorrect calibration can result in injury or death to personnel.

## 22 Error Codes

Go to the [Status screen](#) to view any active errors.

Code	Code Description
01	CALIBRATE ZERO
02	CALIBRATE SPAN
03	CALIBRATE 4mA
04	CALIBRATE 20mA
07	ADC OVER RANGE
08	ADC UNDER RANGE
09	SENSOR OVER RANGE
10	SENSOR UNDER RANGE
11	OVER TEMPERATURE
12	UNDER TEMPERATURE
13	SENSOR END OF LIFE
14	SENSOR FAULT
15	CALIBRATE AMBIENT °C
16	NOT CONFIGURED
17	SENSOR NOT READY
18	SENSOR WARM-UP
19	ISOLATED

Figure 24. Error codes.

## 23 4-20mA Output Fault Conditions

The D-Guard<sup>2</sup>S has two fault currents.

Current Output	Code Description
3.5 mA	Fault or Isolated
21 mA	Over range

Figure 25. 4-20 mA output loop fault currents.

## 24 Specifications

Specifications are subject to change without notice.

### 24.1 Enclosure Specifications

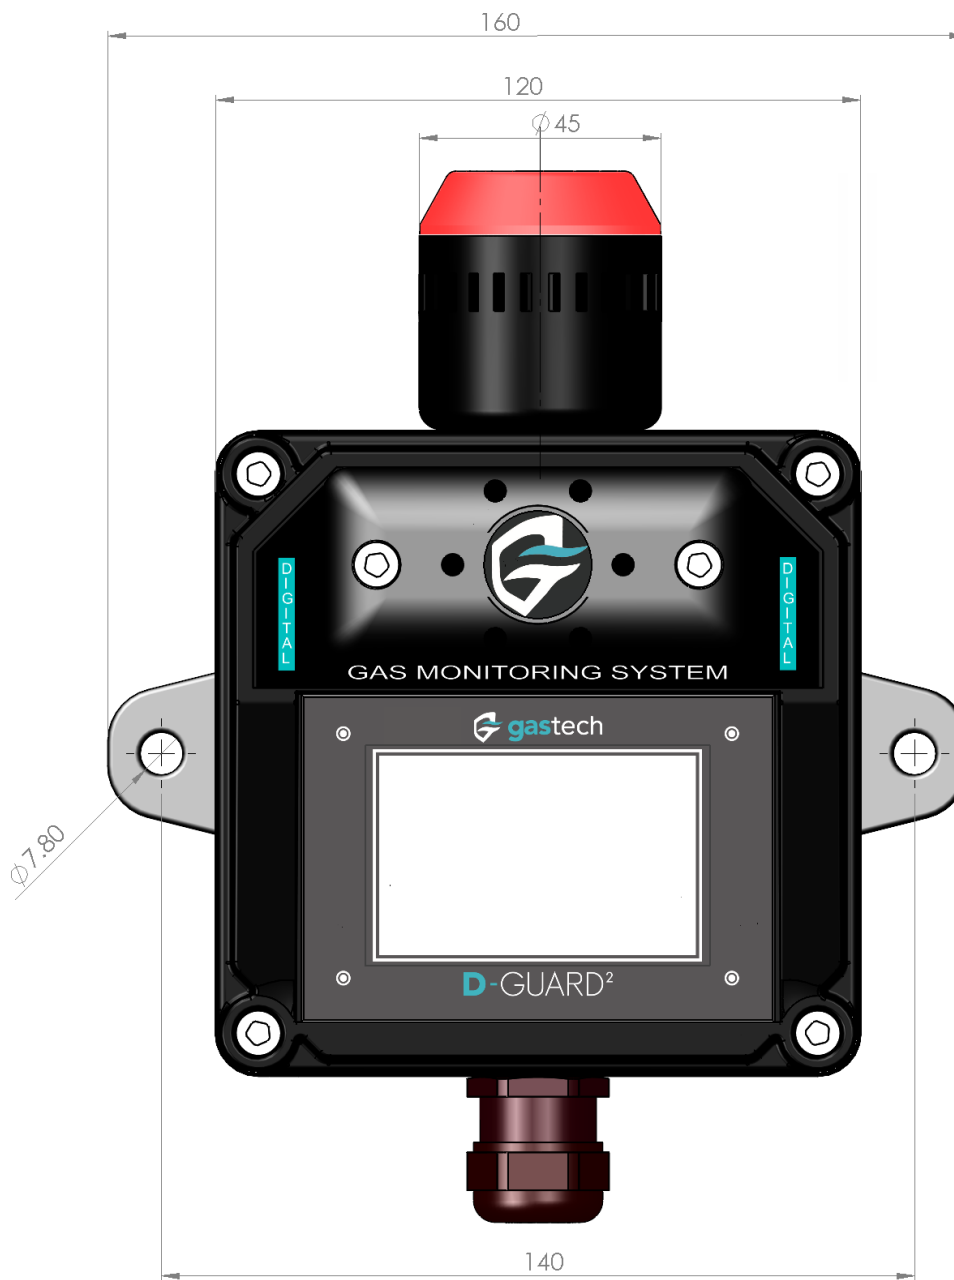


Figure 26. D-Guard<sup>2</sup>S dimensions in millimetres (front view).





Figure 27. D-Guard<sup>2</sup>S dimensions in millimetres (side view).

## 24.2 Mechanical Specifications

Parameter	Description	Specifications	
Enclosure material	Polyoxymethylene		
Enclosure construction	Injection molded		
Enclosure wall section	Wall thickness	6.5mm	7mm
Enclosure IP rating	IP66 & IP67/68		
Enclosure lid Retainer	Not retained		
Enclosure lid fixing	Four screws M5x12		
Cable gland	M20 Cable Gland IP68		
Enclosure footprint	Including mounting supports	195mm high	160mm wide

Figure 28. D-Guard<sup>2</sup>S Mechanical specifications.

## 24.3 Environmental Specifications

Parameter	Description	Specifications	
Storage temperature	Non-powered state	-20°C	60°C
Operating temperature	Temperature limits	-20°C	55°C
Operating humidity	Non-condensing	15%rh	90%rh
Operating pressure	Standard sea-level pressure 101 kPa	-10%	+ 10%

Figure 29. D-Guard<sup>2</sup>S Environmental specifications.

## 24.4 General Specifications

Parameter	Description	Limits	
Measurement technique	Electro chemical cell, infra-red		
Target gas	<a href="#">List of available gas types</a>		
Full scale range	<a href="#">List of ranges by gas types</a>		
Maximum loop current	Under any condition		25 mA
Minimum supply voltage	General, Relay and Siren versions	13 V	
Maximum loop resistance	At a supply voltage of 22 V		380 Ω
Maximum supply voltage	General, Relay and Siren versions		28 V
Loop error signal	Isolated or fault		3.5 mA
Loop error signal	Over range		21 mA
Display	Graphical display 400x240 pixels		

Figure 30. D-Guard<sup>2</sup>S General Specifications.

## 24.5 Wiring Specifications

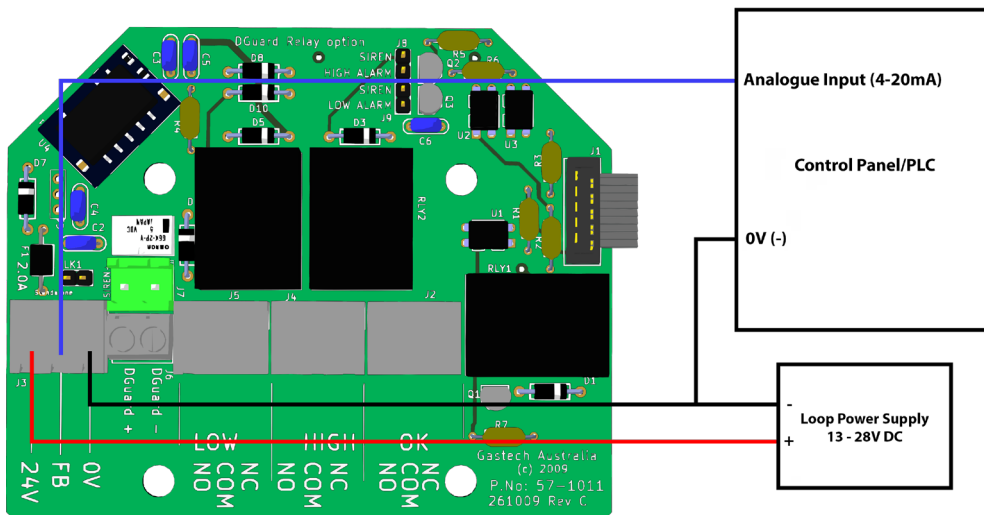


Figure 31. D-Guard<sup>2</sup>S Electrical connections.

**Caution:** The outside diameter of the cable must be between 10 mm and 14 mm. Use a twin core shielded cable. Make sure the cable is sealed by the M20 cable gland to prevent moisture ingress.

**Caution:** You must use a circular cross-section cable. Non-circular cross-section cables can leak between the sheath and the cable gland.

## 24.6 D-Guard<sup>2</sup>S Versions, Gas, Range, and Resolution

Gastech Item Number	Target Gas	Units	Range	Display resolution	Lower Detection Limit
65-1080SH-C3H8	C <sub>3</sub> H <sub>8</sub>	%LEL	100	0.1	0.05
65-1080SH-CH4-5	CH <sub>4</sub>	%Vol	5	0.1	0.1
65-1080SH-CH4-100	CH <sub>4</sub>	%LEL	100	0.1	0.1
65-1080SH-CL2	Cl <sub>2</sub>	PPM	10	0.1	0.05
65-1080SH-CO-100	CO	PPM	100	1	0.5
65-1080SH-CO-500	CO	PPM	500	1	0.5
65-1080SH-CO-1000	CO	PPM	1000	1	0.5
65-1080SH-COH-200	CO (Note 1)	PPM	200	1	0.5
65-1080SH-COH-2000	CO (Note 1)	PPM	2000	1	0.5
65-1080SH-CO2	CO <sub>2</sub>	%Vol	1.5	0.01	0.05
65-1080SH-ETO	EtO	PPM	20	0.1	0.1
65-1080SH-H2S-10	H <sub>2</sub> S	PPM	10	0.1	0.05
65-1080SH-H2S-25	H <sub>2</sub> S	PPM	25	0.1	0.05
65-1080SH-H2S-100	H <sub>2</sub> S	PPM	100	0.1	0.05
65-1080SH-H2S-200	H <sub>2</sub> S	PPM	200	1	0.5
65-1080SH-HCL	HCl	PPM	100	0.1	0.7
65-1080SH-HCN-25	HCN	PPM	25	0.1	0.2
65-1080SH-HCN-50	HCN	PPM	50	0.1	0.2
65-1080SH-HF	HF	PPM	10	0.1	0.15
65-1080SH-N2H4	N <sub>2</sub> H <sub>4</sub>	PPM	1	0.01	0.01
65-1080SH-NH3-100	NH <sub>3</sub>	PPM	100	0.1	1
65-1080SH-NH3-500	NH <sub>3</sub>	PPM	500	1	n/a
65-1080SH-NH3-1000	NH <sub>3</sub>	PPM	1000	1	12
65-1080SH-NO	NO	PPM	100	0.1	0.2
65-1080SH-NO2	NO <sub>2</sub>	PPM	10	0.01	0.02
65-1080SH-O2	O <sub>2</sub>	%Vol	25	0.1	n/a
65-1080SH-O3	O <sub>3</sub>	PPM	2	0.01	0.02
65-1080SH-PH3	PH <sub>3</sub>	PPM	5	0.01	0.015
65-1080SH-SO2	SO <sub>2</sub>	PPM	10	0.1	0.1

Note 1: Models fitted with an H<sub>2</sub> tolerant CO sensor.

Figure 32. D-Guard<sup>2</sup>S versions.

## 25 Warranty

Gastech Australia Pty Ltd guarantees that its products, with the exception of sensors, will be devoid of any flaws in material and craftsmanship for a period of two years from the delivery date.

### 25.1 Sensor Warranty periods

Replacement Sensor	Target Gas	Warranty
65-8080-C3H8	C <sub>3</sub> H <sub>8</sub>	24
65-8080-CH4-01	CH <sub>4</sub>	24
65-8080-CH4	CH <sub>4</sub>	24
65-9094-CL2-2	Cl <sub>2</sub>	12
65-8001-CO-AF	CO	24
201037	CO (Note 1)	24
65-8080-CO2	CO <sub>2</sub>	24
65-8013-ETO-A1	EtO	12
65-8008-H2S-A1	H <sub>2</sub> S	24
65-8008-H2S-AE	H <sub>2</sub> S	24
65-9094-HCL/HBr	HCl	12
65-9094-HCN-4	HCN	12
65-9094-HF	HF	12
65-9094-N2H4	N <sub>2</sub> H <sub>4</sub>	9
65-9094-NH3-5	NH <sub>3</sub>	12
65-9094-NH3-7	NH <sub>3</sub>	12
65-9094-NH3-6	NH <sub>3</sub>	12
65-8002-NO-A1	NO	24
65-9094-NO2	NO <sub>2</sub>	12
65-8000-O2-A3	O <sub>2</sub>	36
65-9094-O3-2	O <sub>3</sub>	12
65-8014-PH3-A1	PH <sub>3</sub>	24
65-8003-SO2-AF	SO <sub>2</sub>	24

Note 1: The CO sensor (Item number 201037) is H<sub>2</sub> tolerant

Figure 33. Sensor warranty periods in months

## 26 Replacement Parts

You can purchase replacement parts for your D-Guard<sup>2</sup>S from Gastech or its authorised service centres.

### 26.1 Replacement Parts - exploded view

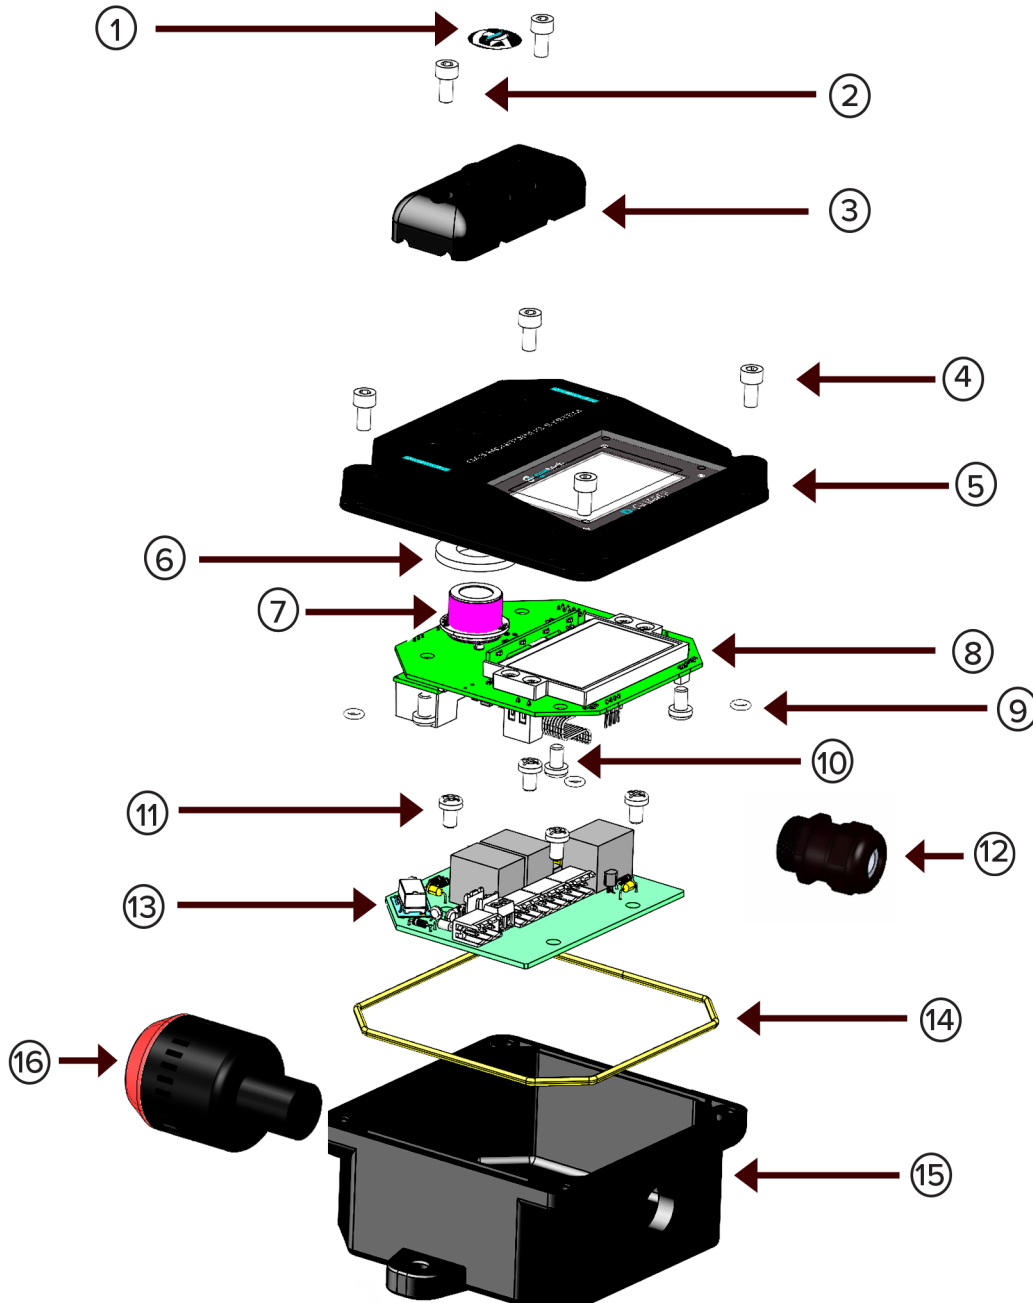


Figure 34. D-Guard<sup>2</sup>S replacement parts - exploded view.

## 26.2 Replacement parts - list

Key	Item Number	Description
1	29-1010-01	Decal, D-Guard <sup>2</sup> S
2	10-1010-06	Socket Head Cap Screw M5x16
3	21-1080-02	Splash Guard D-Guard <sup>2</sup> S
4	10-1010-02	Socket Head Cap Screw M5x12
5	21-1080-03	Lid, Housing, D-Guard <sup>2</sup> S
6	07-1080-01	Sensor gasket (Not for IR sensors)
7	See <a href="#">section 25.1</a>	Sensor
8	57-0028	Main PCB assembly
9	07-1010-10	O ring
10	11-1080-02	Nylon bolt M5x6
11	10-1010-01	Socket Head Cap Screw M5x8
12	18-1080-01	M20 Cable Gland
13	57-1011	Relay PCBA D-Guard <sup>2</sup> S
14	07-1080-20	Main seal
15	21-1080-04	Enclosure base
16	51-1012	D-Guard <sup>2</sup> S Sounder / Strobe

Figure 35. D-Guard<sup>2</sup>S replacement parts list.

## 27 PCB (Part number 57-0028) Configuration Jumpers

NOTE: The PCB jumpers are factory set for the installed sensor.


Jumper Location	Jumper Description	
	J302	Two electrode sensors
	J305	100 Ohm load
	J307	Non-biased electrochemical sensors

Figure 36. PCB 57-0028 jumper locations.

Sensor Item Number	Target Gas	J302	J305	J307
65-8080-C3H8	C <sub>3</sub> H <sub>8</sub>	Do Not Fit	Do Not Fit	Do Not Fit
65-8080-CH4	CH <sub>4</sub>	Do Not Fit	Do Not Fit	Do Not Fit
65-8080-CH4-01	CH <sub>4</sub>	Do Not Fit	Do Not Fit	Do Not Fit
65-9094-CL2-2	Cl <sub>2</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-8001-CO-AF	CO	Do Not Fit	Do Not Fit	Link Fitted
201037	CO (Note 1)	Do Not Fit	Do Not Fit	Link Fitted
65-8080-CO2	CO <sub>2</sub>	Do Not Fit	Do Not Fit	Do Not Fit
65-8013-ETO-A1	EtO	Do Not Fit	Do Not Fit	Do Not Fit
65-8008-H2S-A1	H <sub>2</sub> S	Do Not Fit	Do Not Fit	Link Fitted
65-8008-H2S-AE	H <sub>2</sub> S	Do Not Fit	Do Not Fit	Link Fitted
65-9094-HCL/HBr	HCl	Do Not Fit	Do Not Fit	Do Not Fit
65-9094-HCN-4	HCN	Do Not Fit	Do Not Fit	Link Fitted
65-9094-HF	HF	Do Not Fit	Do Not Fit	Link Fitted
65-9094-N2H4	N <sub>2</sub> H <sub>4</sub>	Link Fitted	Do Not Fit	Do Not Fit
65-9094-NH3-5	NH <sub>3</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-9094-NH3-7	NH <sub>3</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-9094-NH3-6	NH <sub>3</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-8002-NO-A1	NO	Do Not Fit	Do Not Fit	Do Not Fit
65-9094-NO2	NO <sub>2</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-8000-O2-A3	O <sub>2</sub>	Link Fitted	Link Fitted	Do Not Fit
65-9094-O3-2	O <sub>3</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-8014-PH3-A1	PH <sub>3</sub>	Do Not Fit	Do Not Fit	Link Fitted
65-8003-SO2-AF	SO <sub>2</sub>	Do Not Fit	Do Not Fit	Link Fitted

Note 1: The CO sensor (Item number 201037) is H<sub>2</sub> tolerant

Figure 37. PCB 57-0028 jumper settings.

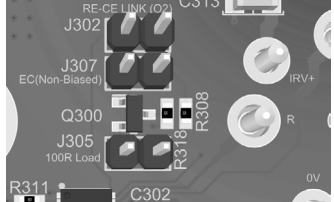

## 28 Maintenance

The D-Guard<sup>2</sup>S must be included in your sites regular maintenance program.

### 28.1 Calibration Interval

Make sure the D-Guard<sup>2</sup>S is calibrated regularly. Gastech recommends at least every six months.

### 28.2 Cleaning



Figure 38. Splash Guard.

- Step 1. Remove the Splash Guard from the D-Guard<sup>2</sup>S.
- Step 2. Use a brush to remove any debris.
- Step 3. Wash the Splash Guard in potable water.
- Step 4. Wipe the outside of the D-Guard<sup>2</sup>S with a cloth dampened with potable water only.
- Step 5. Refit the Splash Guard.

**Caution:** Make sure the Splash Guard is dry before use.

**Caution:** Do not use solvents to clean the D-Guard<sup>2</sup>S. Solvents can damage sensors.

### 28.3 Visual Inspection

- Step 1. Make sure all fasteners and cable glands are secure.
- Step 2. Inspect the inside of the D-Guard<sup>2</sup>S for moisture ingress. Replace the main seal as required.

## 29 Gastech Policy Statements

### Statement

Gastech Australia Pty Ltd owns proprietary rights in the information disclosed within. By receiving this document, the recipient agrees that neither this document nor the information disclosed within nor any part shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by Gastech Australia Pty Ltd.

### Copyright statement

Information contained in this document is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another program or system without prior written authorization from Gastech Australia Pty Ltd.

### Trademark statement

Protected through use and/or registration in the United States and many foreign countries are the trademarks and service marks of Gastech Australia Pty Ltd. The use of the ® symbol indicates registration in the United States and the ™ is in Australia; registrations may not have been issued at present in other countries. All other product names and logos are trademarks of their respective owners.

### Disclaimer

Under no circumstances will Gastech Australia Pty Ltd be liable for any claims, losses, or damages resulting from or arising out of the repair or modification of the equipment by a party other than Gastech Australia Pty Ltd or its authorized service representatives, or by operation or use of the equipment other than in accordance with the documentation provided by Gastech Australia Pty Ltd, or if the equipment has been improperly maintained or subject to neglect or accident. Any of the foregoing will void the warranty.

### Revisions to manual

All information contained in this manual is believed to be true and correct at the time of publication. However, as part of its continuing efforts to improve its products and their documentation, Gastech Australia Pty Ltd reserves the right to make changes at any time without notice. Any revised copies of this manual can be obtained by contacting Gastech Australia Pty Ltd.



Support

**t** +61 8 6108 0000

**HEAD OFFICE**  
24 Baretta Road  
Wangara WA 6065  
Phone: +61 8 6108 0000

**e** info@gastech.com

**SYDNEY OFFICE**  
Suite G01, 10 Tilley Lane  
Frenchs Forest NSW 2086  
Phone: +61 2 9451 0054

**w** gastech.com

**BRISBANE OFFICE**  
PO Box 59  
Kippa-Ring QLD 4021  
Phone +61 7 3160 0901

